



MTW100

用户指南 | User Guide

双耳配对

同时从充电舱取出两个耳机，双耳自动互连。未连接10秒后，自动进入单耳配对模式。



手机配对

从充电舱取出耳机后，右耳指示灯闪烁。激活手机蓝牙，搜索“Shanling MTW100”进行连接。



单耳配对

从电池舱内单独取出左/右耳机10秒后，搜索“Shanling MTW100”或“Shanling MTW100 L”进行连接。



电量显示

耳机放入充电盒内会有3秒显示电量。

耳机

低电时：语音Battery low。
充电时：白灯呼吸闪烁。
满电时：白灯长亮一分钟
后灯灭。

充电舱

低电时：白灯闪烁。
充电时：白灯呼吸闪烁。
充满电时：白灯长亮。



●●● 三格电量

●●● 一格电量

●●● 二格电量

●●● 低电闪烁

按键功能

耳机未和手机等设备连接状态下，系统默认5分钟后会自动关机，以节约电量。

双击播放/暂停音乐
双击接听/挂断电话
三击右侧：下一曲
三击左侧：上一曲

触控键

长按3s：开启/关闭环境音



恢复出厂设置：断开蓝牙连接，从充电舱将左侧耳机取出，四击后放回，右侧重复此步骤。

注意事项

为正确而安全地使用本产品，请在使用前详细阅读本手册。

使用耳机时应注意下列事项：

- ① 请合理控制使用耳机时的音量和时间。
- ② 请勿在潜在危险环境中使用耳机，以确保安全。
- ③ 尽量避免在驾驶途中使用耳机聆听音乐，拨打或接听电话，分散注意力造成危险。
- ④ 请将耳机置于儿童无法接触到的地方，避免儿童使用不当造成危险。
- ⑤ 在清洗时应避免耳机进水，以免损害耳机音质或耳机。
- ⑥ 应尽量避免持续调高音量，导致你听不到四周的声音，如出现耳鸣或将音量调得过高时，请调到合适音量。
- ⑦ 如使用耳机时感到明显不适，有刺激感或其他不良反应，请立刻停止使用。
- ⑧ 避免将耳机储存或使用于温度低于-15°C或高于55°C的环境，否则则会缩短耳机或电池寿命。

由于产品不断改进,各项规格及设计随时更改,恕不另行通知。
Due to continuous improvement, every specification and design is subject to change at any time without further notice.




微信公众号 微博公众号

公司名称/Company: 深圳山灵数码科技发展有限公司
Produced by Shanling DTD. CO., LTD
公司地址/Address : 深圳市南山区蛇口赤湾一路10号
No.10, Chiwan 1 Road, Shekou Nanshan District of Shenzhen City, China.

QQ群/QQ Group: 667914815; 303983891; 554058348
服务热线/Telephone: 400-630-6778
电子邮件/E-mail: info@shanling.com
官网/Official Website: www.shanling.com

工作时间(周一至周五): 08:00-12:00; 13:30-17:30

保修条款

1. 自购买之日起保修期为12个月。
2. 维修时应提供有效的购买发票或购买凭证，自购买之日起7日内，因产品本身质量问题，在保持原厂包装及附件齐全且无损坏，可享受包退包换服务；自购买之日起第8到15日，只可享受包换服务。
3. 超过保修期我司会根据实际情况酌情收取维修费及元器件更换费。

下列情况不属于包换、保修范围

- a. 自行拆解或未经授权维修产品；
- b. 非本公司及授权经销商出售产品；
- c. 触水，跌落，撞击等引起的故障；
- d. 各种自然灾害引起的损坏；
- e. 其它非本公司造成的损坏；
- f. 无法提供有效保修凭证；

若您所购买的产品出现质量问题，请直接联系销售商家要求提供售后服务或代为送修，您也可通过联系山灵客服以获得服务支持。

Warranty

1. Warranty period is 12 months from the date of purchase. Please provide a valid purchase invoice or proof of purchase when applying for warranty repair.

2. If the product shows quality problems right after purchase, and if the original packaging was kept without damage and with full accessory, customer can apply for replacement or refund within 7 days from purchase. Between 8th and 15th day from purchase, customer can apply for replacement only.
3. After the warranty period, products can be send in for repair and maintenance, but cost of labor, parts and shipping will be charged. Availability of repair parts vary.

Following circumstances results in voiding the warranty.

- a. Disassembly or repair of the product by unauthorized person.
- b. The product was sold by unauthorized distributor or dealer.
- c. Damage caused by drop, crash, liquids, sand and others.
- d. Damage caused by various natural disasters.
- e. Damage caused by third-party-company.


If your purchased product is showing quality problem, please contact your seller or the local distributor. You can also contact Shanling customer service for support.

Stereo mode

Take out both earphones from the charging case at the same time. The left and right earphone will pair with each other, entering the stereo mode. If the earphones fail to pair, please put them back into the charging case and repeat process.

If the earphones were previously paired with any device, they will automatically attempt to reconnect to the last connected device.


If the earphones are not connected to any device within 5 minutes, they will automatically turn off to save power.



Pairing with phone

Take out both earphones from the charging case. The earphones will automatically enter pairing mode, LED indicator on the right earphone will be flashing.

Open Bluetooth settings on your phone and select "Shanling MTW100" from list of "Available devices".

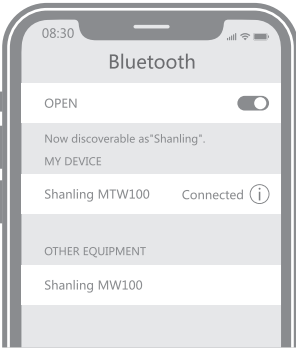


Mono mode

Take out only one earphone from the charging case to enter Mono mode.

Right earphone: If the earphones were previously paired with the device in stereo mode, the right earphone will be connected automatically.

Left earphone: The left earphone must be paired with the device separately. Open Bluetooth settings on your phone and select "Shanling MTW100 L" from list of "Available devices".



Charging


Place the earphones into the charging case. LED indicator will light up for 3 seconds, displaying the battery level of the charging case.

Earphones Charging

Low power:
Voice alert.
Charging:
LED indicator slowly flashing.
Fully charged:
LED indicator lights up for 1 minute, then turns off.

Charging Case Charging

Low power:
LED indicator quickly flashing.
Charging:
LED indicator slowly flashing.
Fully charged:
LED indicator lights up and stay on.

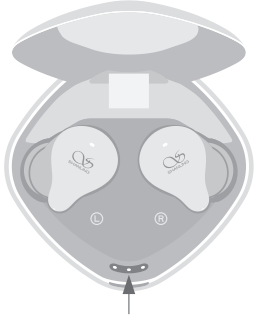

●●● Battery full

●●● Battery 33%

●●● Battery 66%


●●● Low battery (flashing)

Touch control

Double tap to answer/end call
Double tap to pause or resume playback
Triple tap right side: Next track
Triple tap left side: Previous track

Touch sensor

Hold for 3s and let go to enter/exit "Surrounding awareness" mode

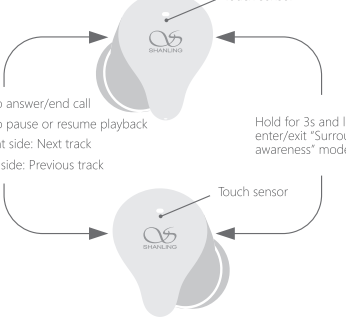

Factory reset: Turn off Bluetooth on any paired device. Take single earphone from the charging case, tap touch sensor four times and place it back into the charging case. Repeat for other earphone.

Safety and care

- ① Listening to music at moderate to high volume for extended periods of time will result in permanent hearing damage. It is advised to keep volume at moderate to low at all times for your safety.
- ② Do not use while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.
- ③ Keep the earphones and packaging out of reach of children.
- ④ Do not use any corrosive cleaner/oil to clean the earphones or charging case.
- ⑤ Do not store or use the earphones and charging case in extreme temperatures, under -15°C or higher than 55°C. Such conditions might affect lifespan of batteries.

| | |
|----|---------------------------------|
| 名称 | MTW100说明书 |
| 尺寸 | 展开：600 x 80mm 折叠成品：75 x 80mm |
| 材质 | 157g双铜 |
| 工艺 | 2C+啤+风琴折 |
| 其它 | 双面印刷 |