 


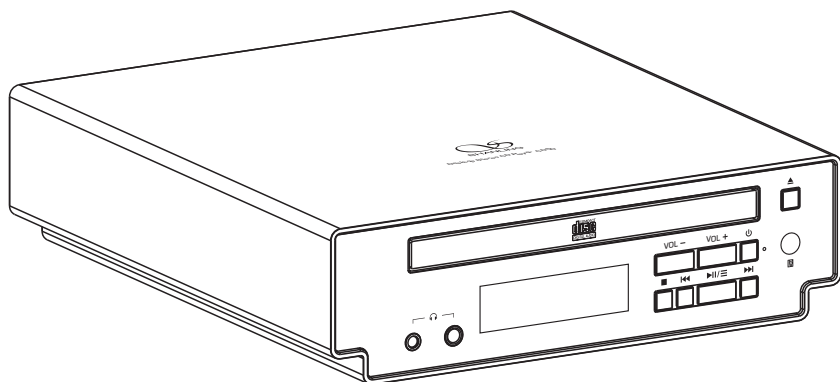

C050

Quick Start Guide

快速入门指南



Safety Instructions

- 1. Don't repair, disassemble or modify the device without permission.
- 2. For good ventilation, a minimum of 10cm clearance shall be maintained at the back and both sides and 20cm at the top of the player.
- 3. Allow no water dripping or splashing into the player. Place no object containing liquid on the player, e.g. Vase.
- 4. Do not cover any ventilation hole with newspaper, cloth, curtain, etc. in case of ventilation blocking.
- 5. Allow no exposed flame source on the player, e.g. burning candle.
- 6. The player shall be connected to AC power output socket with grounding protection.
- 7. If power plug and appliance coupler are used as disconnecting device, the disconnecting device shall be easily operable.
- 8. Only applicable for safe use in the area with elevation under 2000m. See Fig. 1 for the sign.
- 9. Only applicable for safe use under non-tropical climate conditions. See Fig. 2 for the sign.



Safety Precautions



Caution: Risk of electric shock. DO NOT OPEN.

The sign with arrowed lightning inside an equilateral triangle warns the user that the player has high voltages inside which can cause electric shock.


The sign with an exclamation mark inside an equilateral triangle warns the user that the player has important operation and maintenance instructions.

Laser Warning


- 1. Since the laser beam in this player can damage the eye, please do not open the enclosure. Only a qualified technician should carry out repairs.
- 2. This player is classified as a Class 1 laser product, and is identified as such on the label located on the rear of the enclosure.
- 3. The laser components of this product can generate laser radiation above the Class 1 limit.



Parts Name

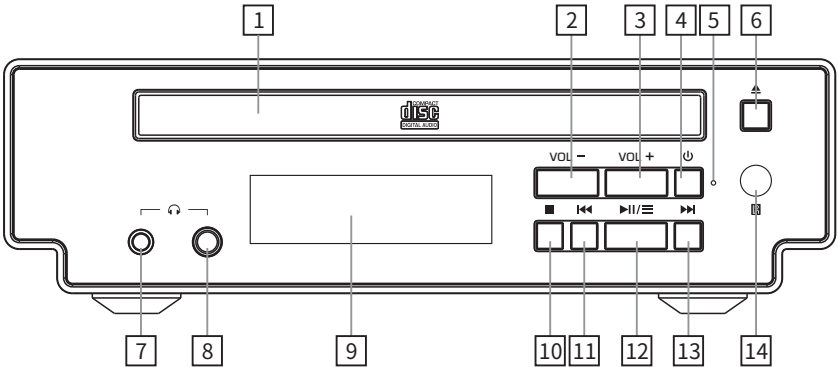


- | | |
|--|--------------------------------------|
| 1. CD Drive | 8. 4.4mm Balanced Headphone Output |
| 2. Volume - Button | 9. Multifunction Display |
| 3. Volume + Button | 10. Stop Button |
| 4. Power / Standby Button | 11. Previous Track Button |
| 5. Power Indicator | 12. Play/Pause / Menu Setting Button |
| 6. Eject Button | 13. Next Track Button |
| 7. 3.5mm Single-Ended Headphone Output | 14. Remote Control Receiver |

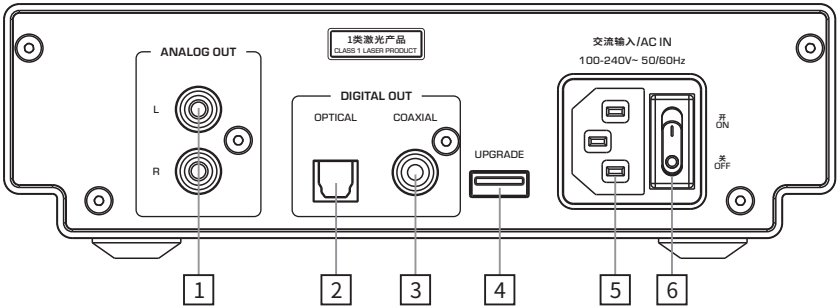

- | | |
|---------------------------|--------------------------------------|
| 1. RCA Analog Output | 4. PC USB connection for Update Only |
| 2. Digital Optical Output | 5. Power Connector |
| 3. Digital Coaxial Output | 6. Power Switch |

Remote Control Diagram

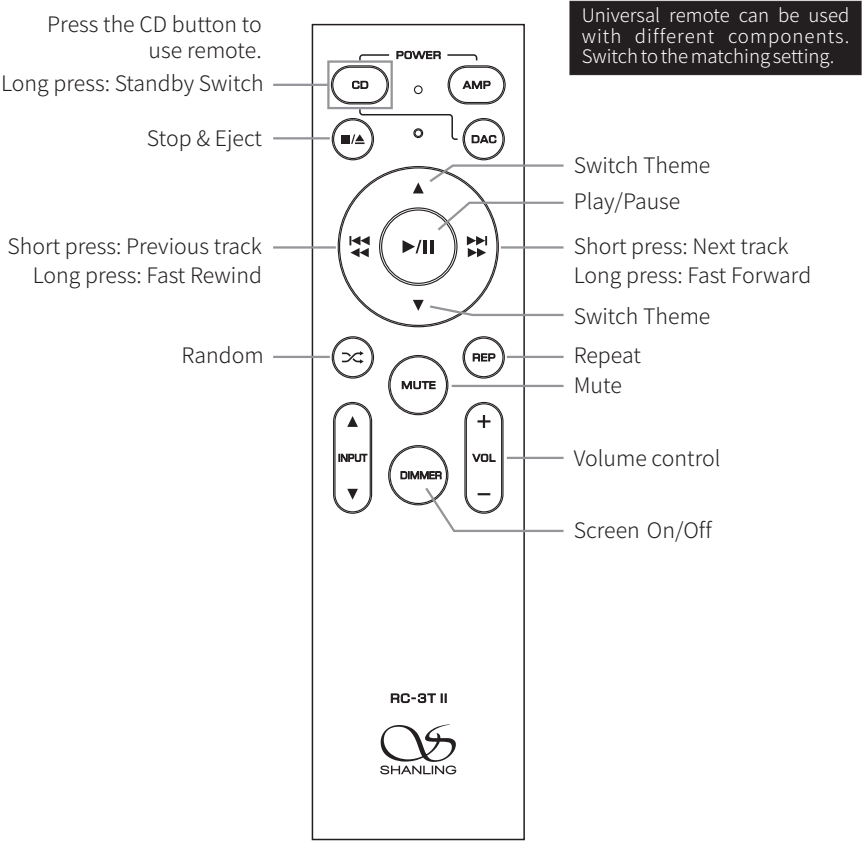

- Note:
1. Use remote within 10m distance and less than 30 degree angle.
 2. Some buttons on universal remote server no functions with this device.

Operating instructions


Turn ON/OFF

1. Connect the power cord and signal cable of the machine.
2. Set the rear button to [ON] position, LED indicator then turn red.
3. Long press the [⏻] button for 2 seconds. Indicator will turn blue and device power On.
4. Long press the [⏻] button for 2 seconds to turn off the device, indicator will turn red.
5. Put the power button on the rear side into OFF position to completely power off the machine.

First Boot up language setting: Use [⏮] or [⏭] keys to choose between English and Chinese language for the system. Press the [⏭/≡] to confirm. Language can be changed later in the settings.

Menu Setting

- Long Press [⏭/≡] button to enter settings.
- Press [⏮] button to change settings or move in menus.
- Press [⏭] button to change settings or move in menus.
- Press [⏭/≡] button to enter setting or to confirm.
- Press [■] button to return to previous.
- Hold [⏭/≡] for 2 seconds to exit settings menu.

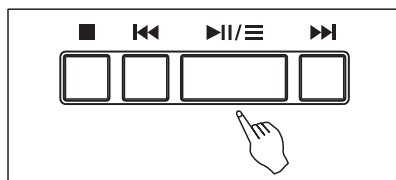

Available settings:

- Gain Level: "High" or "Low".
- PCM Filter: 5 Filters
- Audio Output: "RCA" or "Headphone Amp".
- CD Play Mode: "Normal"、"Repeat All"、"Repeat One" or "Random".
- Brightness
- Screen Off
- Language: "English" or "Chinese".
- Theme
- Factory Reset: Hold the Stop button for 2 seconds to initiate Factory Reset.

Note: Only one analog audio output is active at a time, please switch between RCA and Headphone Amp as needed. Digital outputs are always active.

Eject

Press the [▲] button on the panel or remote to open the CD drive. Press the button again to close the CD drive.

Volume Control

Press the [VOL +/-] buttons on the panel or remote control to increase or decrease the volume.

Stop

Press the [■] button on the panel or on the remote control to stop the playback.

Pause Playback

Press the [▶/II] button on panel or remote to pause playback. Press the button again to resume playback. "II" Icon will be displayed while playback is paused.

Previous Track

Press the [◀◀] button on the panel or the remote control. If the current track progressed less than 5 seconds, playback skips to the previous track. Otherwise playback will go back to the beginning of the current track, then press again to skip to the previous track.

Next Track

Press the [▶▶] button on the panel or remote control to skip to the next track.

Fast Rewind / Fast Forward

Long press the [◀◀] or [▶▶] button on the panel or remote control to rewind or fast forward in the current track.

Repeat

If you want to play the current track repetitively, press [REP] button on remote control once. Display will show "◁".

If you want to play the entire disc repetitively, press [REP] button on remote control again. Display will show "◁".

To cancel repeat, press the button again. Display will show "≡".

Random Playback

1. Press the [⏮] button on the remote control. Display will show "⏮".
2. Press the [⏮] button on the remote control to end random playback.

Screen On/Off


Press the [DIMMER] button on the remote to turn display On/Off.

Mute Playback

1. Press the [MUTE] button on the remote to mute playback. Display will show "🔇".
2. Press the [MUTE] button on the remote again to resume playback.


Headphone Output Interface

Device offer industry-standard 3.5mm single-ended and Balanced 4.4mm connectors. Please use 4.4mm output only with headphones with proper balanced wiring.

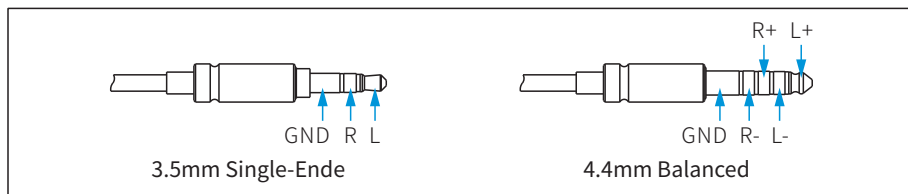

Firmware Update

1. Please connect the device to a computer using a USB-A to USB-A cable.
2. Please visit our official website at en.shanling.com for firmware update download and instructions.

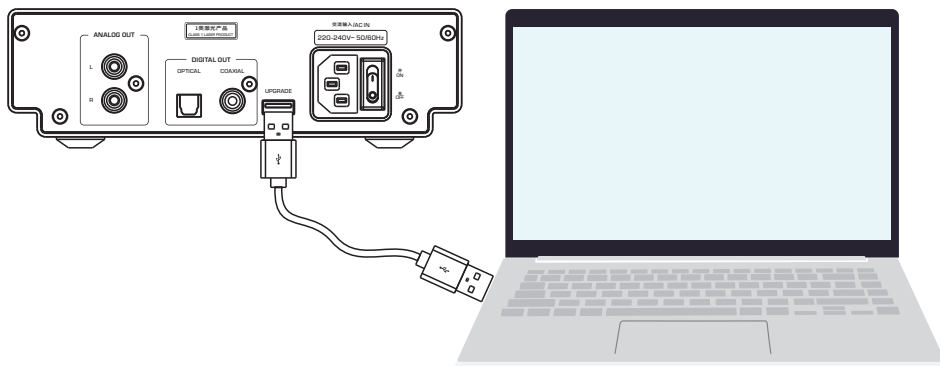

Firmware Version Display

On main screen, hold the [■] button for 2 seconds to view the current firmware version. Hold the [■] button for 2 seconds to close the window or wait 10 seconds for it to close itself.

Accessories

Quick Start Guide: 1
Warranty Card: 1
Power Cord: 1
Remote Control: 1

安全指示

1. 不可自行开启本机进行维修、拆卸或改造。
2. 为了充分通风，设备背面和两侧应最少保留10cm，顶部应最少保留20cm的空间。
3. 设备不应遭受水滴或水溅，机器上不应放置诸如花瓶一类的装满液体的物品。
4. 通风孔不要覆盖诸如报纸、桌布和窗帘等物品而妨碍通风。
5. 设备上不要放置裸露的火焰源，如点燃的蜡烛。
6. 设备应当连接到带保护接地连接的电网电源输出插座上。
7. 用电源插头和器具耦合器作为断开装置，断开装置应当保持能方便地操作。
8. 仅适用于海拔2000m以下地区安全使用，标志见图1。
9. 仅适用于非热带气候条件下安全使用，标志见图2。



图1

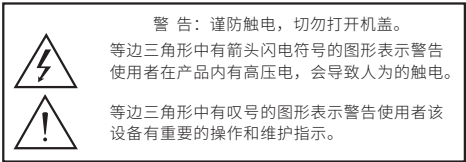


图2

★ 产品技术标准：GB4943.1-2022

安全注意事项

◎ 安全警告




◎ 激光警告


1. 由于本装置中使用的镭射光束对眼睛有害，请勿打开机箱，只有专业人员方可维修。
2. 本装置被划分为1级镭射产品，1级镭射产品标牌位于机箱后面。
3. 本机的镭射元件能产生超过1级限度的镭射。



部件名称

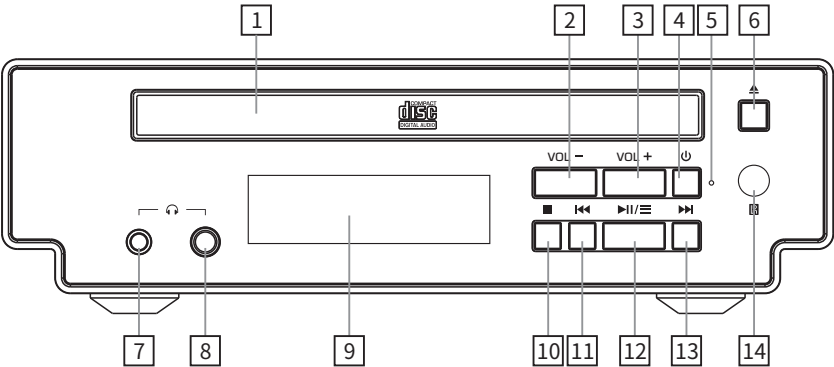


- | | | |
|----------|----------------|-----------------|
| 1. 碟仓区 | 6. 进出仓键 | 11. 上一曲选择键 |
| 2. 音量-键 | 7. 3.5mm单端耳机输出 | 12. 播放/暂停/菜单设置键 |
| 3. 音量+键 | 8. 4.4mm平衡耳机输出 | 13. 下一曲选择键 |
| 4. 待机开关键 | 9. 多功能显示窗 | 14. 遥控接收窗 |
| 5. 电源指示灯 | 10. 停止键 | |

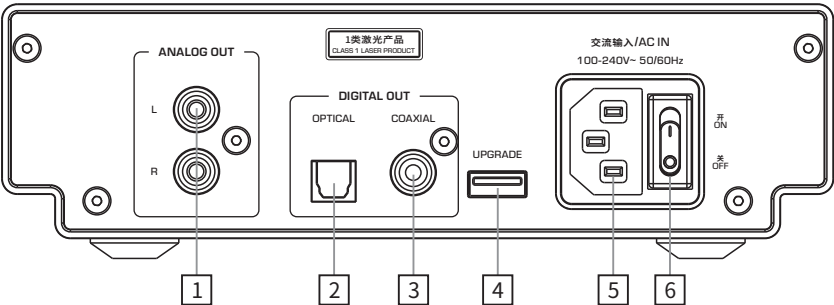

- | | |
|----------------|---------------|
| 1. RCA模拟音频输出接口 | 4. 升级接口(连接电脑) |
| 2. 数字光纤输出接口 | 5. 交流电源输入插座 |
| 3. 数字同轴输出接口 | 6. 总电源开关 |

遥控器示意图

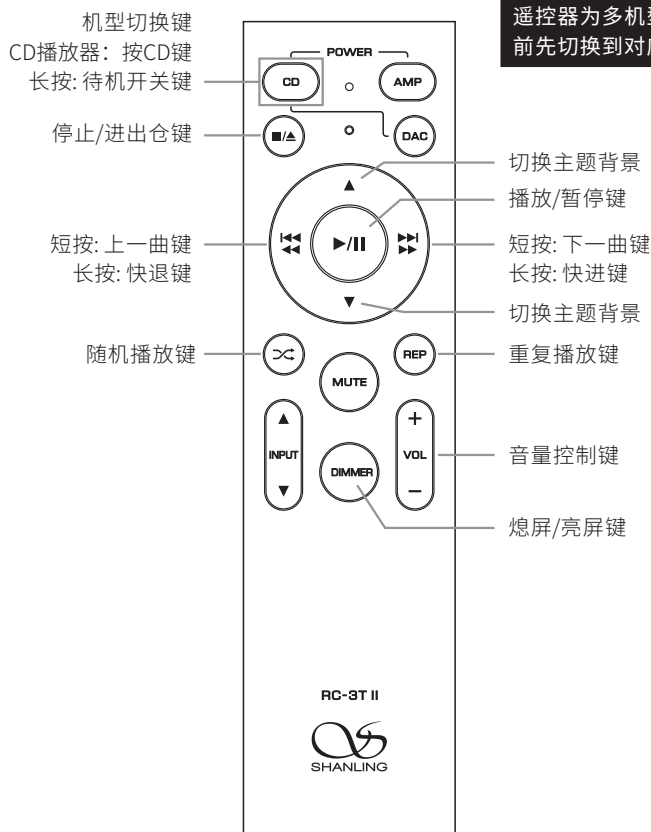

遥控器为多机型通用，使用前先切换到对应的机型键。

注：

1. 遥控器有效距离不大于10米，遥控夹角不大于30度。
2. 遥控器未标示按键非本机功能，操作无效属正常现象。

操作说明

开/关机器

1. 首先连接好机器的电源线及信号线。
2. 按下后板上的电源开关键至 [ON/开] 位置，此时待机指示灯变为红色。
3. 长按面板上的 [⏻] 键约2秒，指示灯由红色变为蓝色，即进入开机状态。
4. 开机状态下，长按面板上的 [⏻] 键约2秒，指示灯变为红色，机器将停止播放并关闭部份电源。
5. 要关闭本机电源时，将后板电源开关置于 [OFF/关] 位置即可。若长时间不使用本机时，请将本机的交流输入电源线与市电插座分离。

首次开机语言设置：使用面板上的 [⏮] 或 [⏭] 键在 "English" 或 "中文" 之间选择系统语言，按 [▶||≡] 键确认，语言也可在后续设置中更改。


菜单设置

1. 在主界面：

- 长按机器上的 [▶||≡] 键即可进入菜单设置界面。

2. 在菜单设置界面及二级菜单项界面：

- 短按 [⏮] 键为向左选择或改变选项设置。
- 短按 [⏭] 键为向右选择或改变选项设置。
- 短按 [▶||≡] 键为进入下一级/确认。
- 短按 [■] 键为返回上一级。
- 长按2秒 [▶||≡] 键为返回主界面。

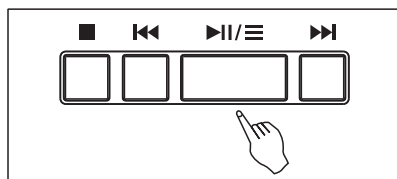

3. 在菜单设置界面，可对以下选项进行设置：

- 增益：可选择 "高" 或 "低" 增益。
- 滤波器：可设置5种不同效果。
- 音频输出：可选择 "前级输出" 或 "耳机输出"。
- 播放模式：可选择 "顺序播放"、"整碟循环"、"单曲循环" 或 "随机播放"。
- 屏幕亮度：可调节屏幕的亮暗度。
- 熄屏时间：可设置常亮或关屏时间。
- 语言：可选择 "English" 或 "中文" 界面。
- 主题：提供多种搭配可调，根据自己喜欢进行设置。
- 恢复出厂设置：根据提示长按停止键2秒即可进行恢复出厂设置。

注：使用前面板上的耳机接口时需将 "音频输出" 设置在 "耳机输出" 模式；
使用后板上的RCA接口时需将 "音频输出" 设置在 "前级输出"模式，否则无声音输出。

进出仓

在开机状态下，按下前面板或遥控器上的 [▲] 键，可打开碟仓托盘，将碟片放上后再按一次该键即可关闭碟仓托盘。

音量控制

按机器或按遥控器上的 [VOL +/-] 键，可以增加或减小音量。

停止

在播放状态下，按下前面板或遥控器上的 [■] 键，可停止该碟片的播放。

暂停播放

在播放过程中，若想要中断播放而短时间进入暂停状态，则按下前面板或遥控器上的 [▶/II] 键，此时显示屏上显示 "II" 图标，若再按一次该键则恢复正常播放状态。

上一曲

在正常播放时，按下前面板或遥控器上的 [◀◀] 键，若当前曲目播放时间少于5秒，则跳向前一个曲目。若当前曲目播放时间大于5秒，则回到当前曲目起始处播放，再按一下才跳向前一个曲目进行播放。

下一曲

在正常播放时，按下前面板或遥控器上的 [▶▶] 键，即可跳向下一个曲目进行播放。

快退/快进

长按前面板或遥控器上的 [◀◀] 或 [▶▶] 键时可在当前曲目中快退或快进，放开该键时恢复正常播放状态。

重复播放

如果连续重复播放当前曲目，按遥控器上的 [REP] 键一次，显示屏显示 "↺" 图标。如果连续重放整张碟片上的曲目，则再按一次 [REP] 键，显示屏显示 "↻" 图标。若想取消重复播放功能，则再按一次 [REP] 键，显示屏显示 "≡" 图标。

随机播放

1. 在播放状态下，按下遥控器上的随机播放键 [⚡]，显示屏上显示 "⚡" 图标。碟机随机播放碟片曲目直至全部播放完毕。
2. 按一次 [⚡] 键，即可取消随机播放。

熄屏/亮屏


按下遥控器上的 [DIMMER] 键可打开或关闭屏幕显示。

静音

1. 在放音状态下按下遥控器上的 [MUTE] 键，显示屏显示 "M" 图标，此时无声音输出。
2. 在静音状态下，再按下遥控器上的 [MUTE] 键一次，恢复正常放音状态。


耳机输出接口

本机配备了3.5mm单端耳机接口和4.4mm平衡耳机接口，请根据耳机插头选择合适的耳机接口聆听音乐。

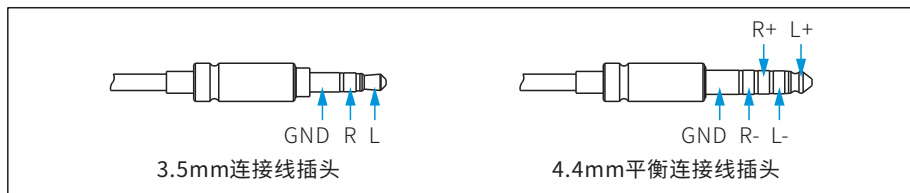

固件升级

1. 请用一根USB-A转USB-A线将机器与电脑连接。
2. 请登录官网www.shanling.com，进入下载中心，对应产品型号进行下载，并按操作说明进行升级。

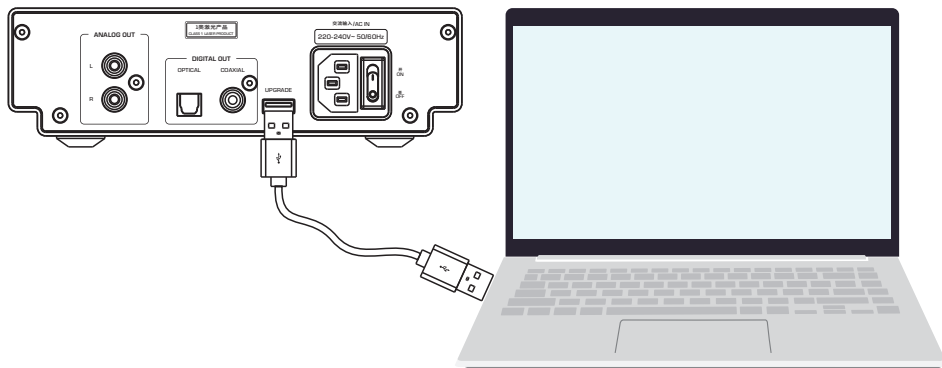

版本查看

在主界面长按 [■] 键2秒可查看固件版本号，短按 [■] 键或10秒后自动返回主界面。

随机附件

快速入门指南：1份
保修卡：1份
三联电源线：1根
遥控器：1个



微信公众号



微博公众号

公司名称: 深圳山灵数码科技发展有限公司

Company: Shenzhen Shanling Digital Technology Development Co.,Ltd.

公司地址: 深圳市南山区蛇口赤湾一路10号

Address: No.10, Chiwan 1 Road, Shekou Nanshan District of Shenzhen City, China.

QQ群/QQ Group: 667914815; 303983891; 554058348

服务热线/Telephone: 400-630-6778

电子邮件/E-mail: info@shanling.com

官网/Official Website: www.shanling.com

工作时间(周一至周五): 08:00-12:00; 13:30-17:30

由于产品不断改进,各项规格及设计随时更改,恕不另行通知。

Due to continuous improvement, every specification and design is subject to change at any time without further notice.