 


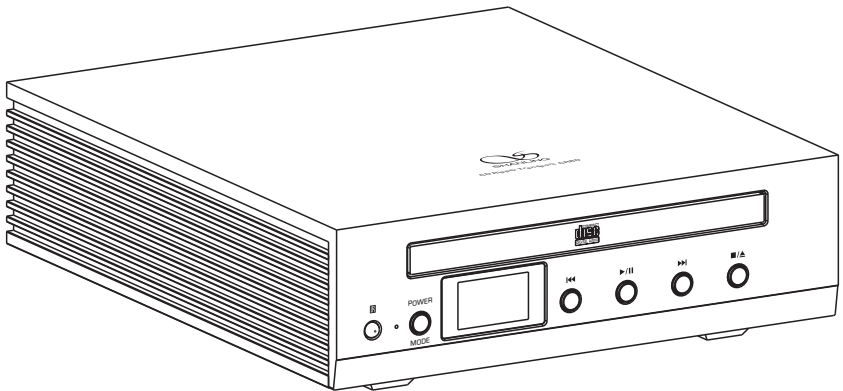

# CR60

快速入门指南  
Quick Start Guide



## 安全指示

1. 不可自行开启本机进行维修、拆卸或改造。
2. 为了充分通风，设备背面和两侧应最少保留10cm，顶部应最少保留20cm的空间。
3. 设备不应遭受水滴或水溅，机器上不应放置诸如花瓶一类的装满液体的物品。
4. 通风孔不要覆盖诸如报纸、桌布和窗帘等物品而妨碍通风。
5. 设备上不要放置裸露的火焰源，如点燃的蜡烛。
6. 使用电源适配器，应购买获得CCC认证并满足标准要求。
7. 必须遵照电池废弃的相关地方条例来废弃旧电池。

 
★ 产品技术标准：GB4943.1-2022

## 激光警告


1. 由于本装置中使用的镭射光束对眼睛有害，请勿打开机箱，只有专业人员方可维修。
2. 本装置被划分为1级镭射产品，1级镭射产品标牌位于机箱后面。
3. 本机的镭射元件能产生超过1级限度的镭射。



## 部件名称

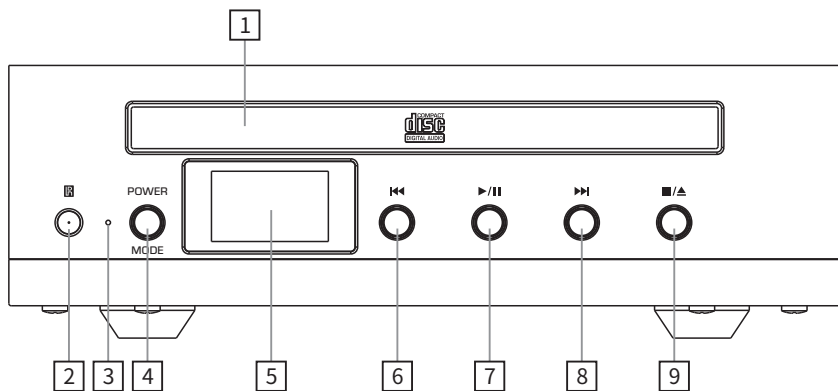


- |          |             |            |
|----------|-------------|------------|
| 1. 碟仓区   | 4. 电源/模式切换键 | 7. 播放/暂停键  |
| 2. 遥控接收窗 | 5. 多功能显示窗   | 8. 下一曲选择键  |
| 3. 电源指示灯 | 6. 上一曲选择键   | 9. 停止/进出仓键 |

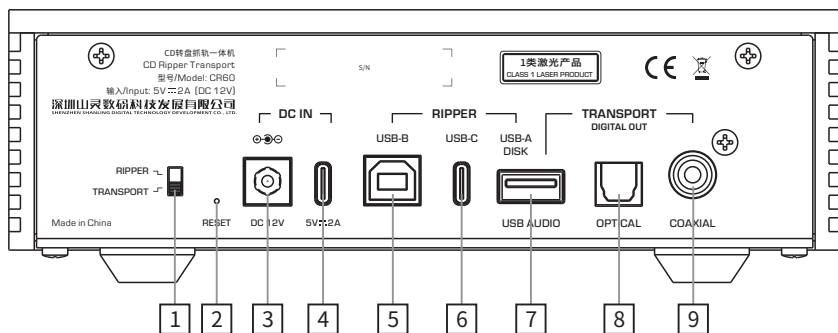 

- |                     |                       |
|---------------------|-----------------------|
| 1. 翻录/转盘切换开关        | 6. USB-C接口            |
| 2. 复位键              | 7. USB-A接口/USB数字音频输出口 |
| 3. 12V直流电源输入接口      | 8. 数字光纤输出口            |
| 4. Type-C USB电源输入接口 | 9. 数字同轴输出口            |
| 5. USB-B接口          |                       |

## 遥控器示意图

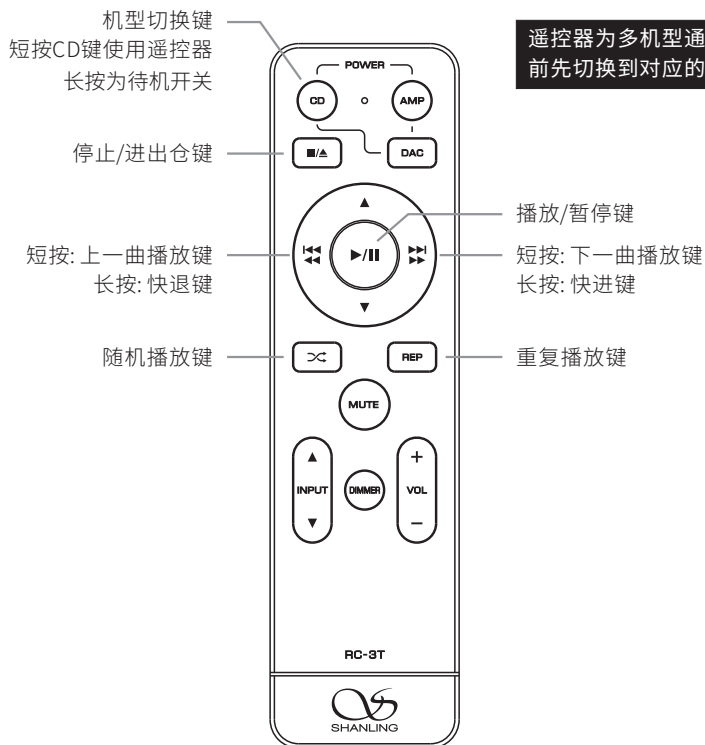 

遥控器为多机型通用，使用前先切换到对应的机型键。

注：

1. 遥控器有效距离不大于10米，遥控夹角不大于30度。
2. 遥控器未标示按键非本机功能，操作无效属正常现象。

## 操作说明

### 开/关机器

1. 首先将随机配的USB线接到5V/2A的适配器上，并插于机器上的5V/2A电源接口上。  
(当转盘时如需体验更好的音质，可直接使用12V直流电源适配器供电。)
2. 长按遥控器上的[CD]键或短按机器面板上的[POWER]键，电源指示灯由红色变为绿色，即进入开机状态。
3. 开机状态下，长按遥控器上的[CD]键或长按机器面板上的[POWER]键2秒，电源指示灯变为红色，机器将停止播放并关闭部份电源。
4. 若长时间不使用本机时，请拔掉适配器。

### 停止/进出仓

1. 在开机状态下，按下前面板或遥控器上的[■/▲]键，可打开碟仓托盘，将碟片放上后再按一次该键即可关闭碟仓托盘。
2. 在播放状态下，按下机器或遥控器上的[■/▲]键，先停止当前碟片的播放，再按一次该键即可弹出碟片。

注：在翻录状态下，按下机器或遥控器上的[■/▲]键一次即可弹出碟片。

### 翻录功能

1. 将后板上的拨动开关置于"RIPPER"位置，此时为翻录模式。
2. 按下前面板上的[MODE]键，可在"USB-A — USB-B — USB-C"进行循环切换。  
USB-A接口: 可插U盘/硬盘  
USB-B接口: 连接电脑  
USB-C接口: 连接数播及手机(连接手机可使用APP手动匹配专辑信息)

注：翻录模式下"播放/暂停、上一曲、下一曲"按键操作无效。

### 转盘功能

1. 将后板上的拨动开关置于"TRANSPORT"位置，此时为转盘模式。
2. 音源输出"USB AUDIO"、"OPTICAL"、"COAXIAL"。  
USB AUDIO接口: USB音频输出  
OPTICAL接口: 数字光纤输出  
COAXIAL接口: 数字同轴输出

## 播放/暂停 (CD转盘)

1. 当放好碟片后或碟片处于停止状态时，按面板或遥控器上的 [▶/||] 键，可对当前碟片进行播放。
2. 在播放状态下，按面板或遥控器上的 [▶/||] 键，可对当前碟片进行暂停播放，再按一次该键时则恢复正常播放状态。

## 上一曲 (CD转盘)

按面板或遥控器上的 [◀◀] 键，若当前曲目播放时间少于5秒，则跳向前一个曲目。若当前曲目播放时间大于5秒，则回到当前曲目起始处播放，再按一下才跳向前一个曲目进行播放。

## 下一曲 (CD转盘)

按面板或遥控器上的 [▶▶] 键，即可跳向下一个曲目进行播放。

## 快退/快进 (CD转盘)

长按前面板或遥控器上的 [◀◀/▶▶] 或 [◀◀/▶▶] 键时可在当前曲目中快退或快进，放开该键时恢复正常播放状态。

## 重复播放 (CD转盘)

连续重复播放当前曲目，按遥控器上的 [REP] 键一次，显示屏显示 "↺" 图标。连续重复播放整张碟片上的曲目，则再按一次 [REP] 键，显示屏显示 "↻" 图标。若想取消重复播放功能，则再按一次 [REP] 键，显示屏显示 "↻" 图标。

## 随机播放 (CD转盘)

1. 在播放状态下，按下遥控器上的 [⌘] 键，显示屏显示 "⌘" 图标，表示已在开始执行随机播放功能，直至全部播放完毕。
2. 按一次遥控器上的 [⌘] 键，即可取消随机播放。

## APP操作

扫描二维码并对应下载Eddict Player APP，安装完成后即可对产品进行操作。



Eddict Player  
扫码即可下载

## APP连接操作

1. 先将手机连接至CR60后板上的"USB-C"接口上。
2. 打开APP，在主页点击左上角侧边功能键进入操作界面。(图1)
3. 点击"CD翻录"进入翻录界面，在音轨界面可以编辑"专辑名"或"艺术家名"进行专辑匹配，选取匹配的专辑进行翻录数据编辑。(图2)
4. 在专辑界面可以查看匹配的整张专辑信息，亦可手动编辑信息进行翻录。(图4)
5. 点击"音轨"或"专辑"界面的"开始翻录"按钮即可开始翻录。(图3、图4)
6. 在设置界面可以查看"当前存储路径"和"翻录文件格式"。(图5)

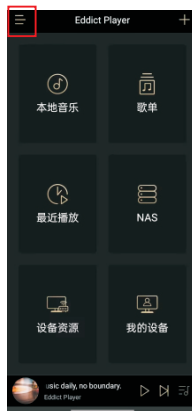 


图1



图2

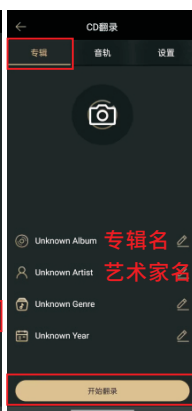 


图3

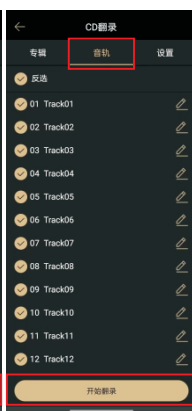 


图4

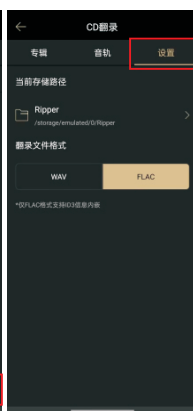 


图5

## 版本查看

在任意界面长按面板上的 [▶/||] 键3秒即可显示当前版本号，按任意键即可退出。

## 固件升级

升级过程中请不要操作机器。

### U盘升级

1. 请在山灵官网 - 产品中心 - CR60产品页面下载固件升级程序，将新固件 (update.bin) 拷贝到U盘根目录下。
2. 把U盘插入机器后板上的USB-A口，并将后板上的拨动开关置于 "TRANSPORT" 位置。
3. 在任意界面长按面板上的 [▶/||] 键3秒进入版本号界面，再长按面板上的 [▶/||] 键3秒即可自动进行升级，升级完成后机器将自动重启。

## 恢复出厂设置

在任意界面长按面板上的 [▶/||] 键3秒进入版本号界面，再长按面板上的 [■/▲] 键3秒即可自动恢复出厂设置。

## 随机附件

快速入门指南：1份

保修卡：1份

USB A转Type-C线：1根

遥控器：1个



## Safety Instructions

 
1. Don't repair, disassemble or modify the device without permission.
2. For good ventilation, a minimum of 10cm clearance shall be maintained at the back and both sides and 20cm at the top of the player.
3. Allow no water dripping or splashing into the player. Place no object containing liquid on the player, e.g. Vase.
4. Do not cover any ventilation hole with newspaper, cloth, curtain, etc. in case of ventilation blocking.
5. Allow no exposed flame source on the player, e.g. burning candle.
6. The waste battery must be treated according to relevant local battery wasting regulations.

## Laser Warning


1. Since the laser beam in this player can damage the eye, please do not open the enclosure. Only a qualified technician should carry out repairs.
2. This player is classified as a Class 1 laser product, and is identified as such on the label located on the rear of the enclosure.
3. The laser components of this product can generate laser radiation above the Class 1 limit.



## Parts Name

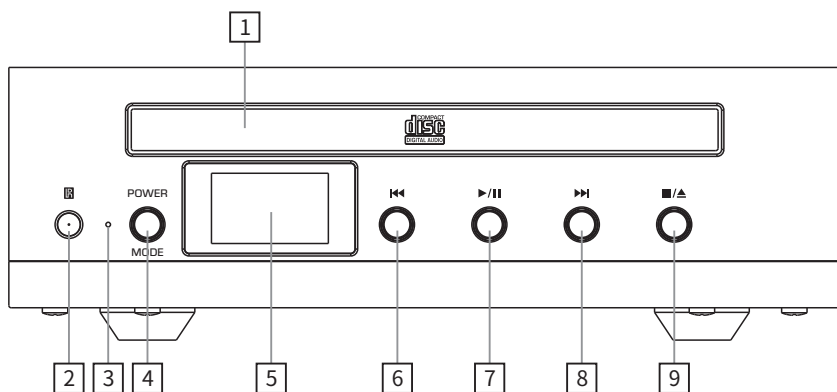


- |                            |                          |                        |
|----------------------------|--------------------------|------------------------|
| 1. CD Drive                | 4. Power/Mode Button     | 7. Play/Pause          |
| 2. Remote Control Receiver | 5. Multifunction Display | 8. Next Track          |
| 3. Power Indicator         | 6. Previous Track        | 9. Stop & Eject Button |

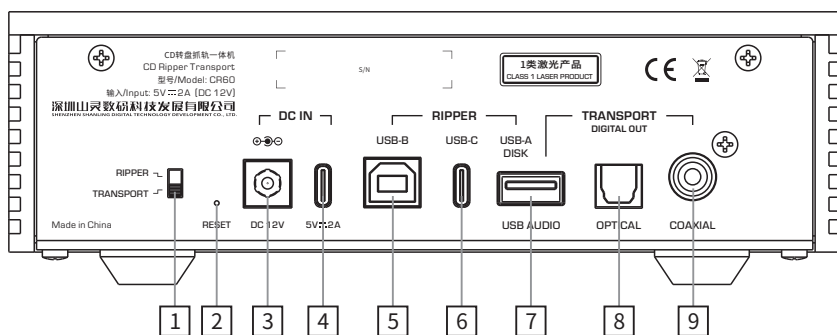 

- |                       |                      |                                 |
|-----------------------|----------------------|---------------------------------|
| 1. Mode Switch        | 4. USB-C Power Input | 7. USB-A Output (USB Audio Out) |
| 2. Reset Button       | 5. USB-B Output      | 8. Digital Optical Output       |
| 3. 12V DC Power Input | 6. USB-C Output      | 9. Digital Coaxial Output       |

## Remote Control Diagram

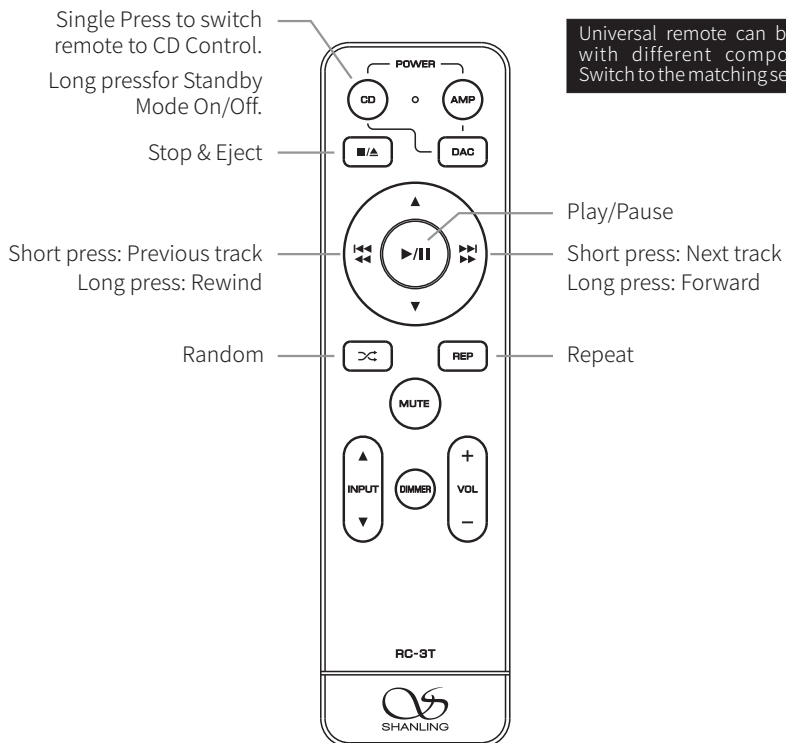 

Note:

1. Use remote within 10m distance and less than 30 degree angle.
2. Some buttons on universal remote server no functions with this device.

## Operating instructions

### Turn ON/OFF

1. Connect Player to 5V/2A USB power adapter or use 12V DC Power Supply. Indicator will light up Red.
2. Long press the [CD] button on remote or short press the [POWER] button on player to power on. Indicator will turn Green and device powers on.
3. Long press the [CD] button on remote or long press the [POWER] button on player to power off.
4. Unplug the power supply if the device will not be used for longer period of time.

### Stop & Eject

1. Press the [■/▲] button on the device or remote to open the CD drive. Press the button again to close the CD drive.
2. Press the [■/▲] button on the device or on the remote to stop the playback, press it again to eject the disk.

Note: In CD Ripping Mode, just press the [■/▲] button once to eject the disc.

### CD Ripping Mode

1. Place the rear Mode switch into "RIPPER" position.
2. Press the [MODE] button on the player to switch between available outputs.

USB-A: Recommended for USB Drives

USB-B: Recommended for Computers

USB-C: Recommended for Hi-Fi Portable player and smartphones (Connected device must include CD ripping service or app to be used with CR60)

Note: Playback buttons are inactive in CD Ripping mode.

### CD Transport Mode

1. Place the rear Mode switch into "TRANSPORT" position.
2. Now you can start normal CD playback, with CR60 providing digital output to connected external DAC.

USB AUDIO: USB-A output, for dedicated USB DACs.

OPTICAL & COAXIAL: Digital SPDIF output to external DACs.

## Play/Pause (CD Transport)

1. Press the [▶/||] button on the panel or remote control to start playback.
2. Press the [▶/||] button on the panel or the remote control to pause playback. Press the button again to resume playback.

## Previous Track (CD Transport)

Press the [◀◀] button on the panel or the remote control. If the current track progressed less than 5 seconds, playback skips to the previous track. Otherwise playback will go back to the beginning of the current track, then press again to skip to the previous track.

## Next Track (CD Transport)

Press the [▶▶] button on the panel or remote control to skip to the next track.

## Rewind / Fast Forward (CD Transport)

Long press the [◀◀/▶▶] or [▶▶/▶▶] button to rewind or fast forward in the current track.

## Repeat Play (CD Transport)

Press the [REP] key on the remote once, then the display shows the "↺" icon and playback will repeat the current track. To repeat the whole album or disc, Press the [REP] key on the remote again, then the display shows the "↻" icon. To cancel the repeat playback function, Press the [REP] key on the remote, then the display shows the "□" icon.

## Random Play (CD Transport)

1. Press the [⌘] key on the remote, the display shows the "⌘" icon to indicate that random playback is active.
2. Press the [⌘] key on the remote to cancel random playback.

## CD Ripping App

Scan the code to download Eddict Player app, our in-house developed app that includes CD Ripping function for CR60.



Eddict Player

1. Connect smartphone to USB-C Output of CR60.
2. Open the Eddict player app and tap on the top left corner icon to view side menu. (Image 1)
3. Tap on the "CD Ripper". Here you can enter tags that will be embedded to the ripped files, either as the whole album or per track. (Images 2, 3 and 4)
4. Tap the "Start Ripper" button to start the process.
5. Storage path and Rip file format available in settings. (Image 5)

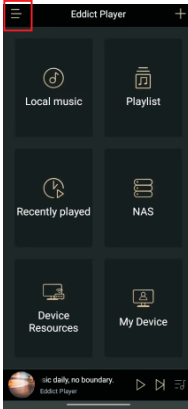 


Image 1

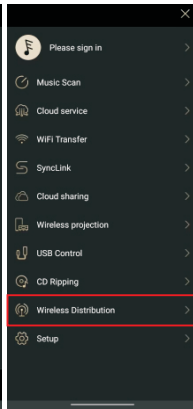 


Image 2

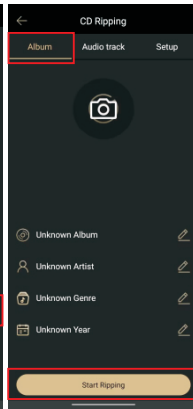 


Image 3

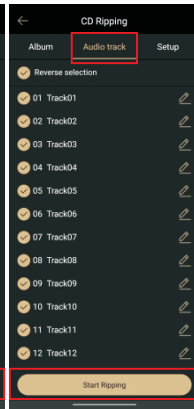 


Image 4

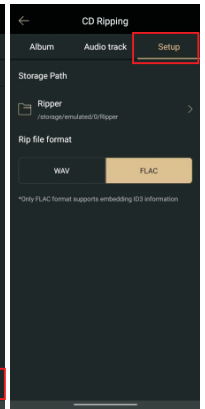 


Image 5

## Firmware Version Display

Long press the [▶/||] button on the player, it will display current firmware version. Press any button to return to normal interface.

## Firmware Update

Do not do operate the player during the update process.

### USB Drive Update

1. Visit the download section of our official website at [en.shanling.com](http://en.shanling.com) to download the latest firmware update for CR60.
2. Unzip the downloaded file and copy the "Update.bin" into root/main folder of the USB drive.
3. Insert the drive into the USB-A port and make sure device is switched into "TRANSPORT" mode.
4. Long press the [▶/||] button, it will display current firmware number. Then long press the [▶/||] button again to start the firmware update. Update will run automatically and device will restart when finished. Remove the drive from the player and all is ready.

## Factory Reset

Long press the [▶/||] button, it will display current firmware number. Then long press the [■/▲] button for 3 seconds to factory reset the device.

## Accessories

Quick Start Guide: 1
Warranty Card: 1
USB A to Type-C Cable: 1
Remote Control: 1



微信公众号



微博公众号



Eddict Player  
扫码即可下载

公司名称: 深圳山灵数码科技发展有限公司

Company: Shenzhen Shanling Digital Technology Development Co.,Ltd.

公司地址: 深圳市南山区蛇口赤湾一路10号

Address: No.10, Chiwan 1 Road, Shekou Nanshan District of Shenzhen City, China.

---

QQ群/QQ Group: 667914815; 303983891; 554058348

服务热线/Telephone: 400-630-6778

电子邮件/E-mail: info@shanling.com

官网/Official Website: www.shanling.com

---

工作时间(周一至周五): 08:00-12:00; 13:30-17:30

由于产品不断改进, 各项规格及内容随时更改, 恕不另行通知。

Due to continuous improvement, every specification and design is subject to change at any time without further notice.