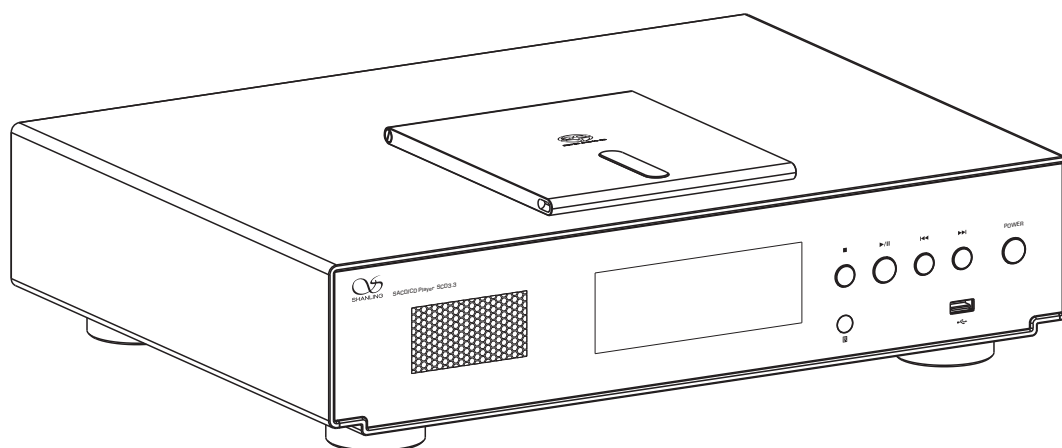 




SCD3.3

Quick Start Guide 快速入门指南



Safety Instructions

1. Don't repair, disassemble or modify the device without permission.
2. For good ventilation, a minimum of 10cm clearance shall be maintained at the back and both sides and 20cm at the top of the player.
3. Allow no water dripping or splashing into the player. Place no object containing liquid on the player, e.g. Vase.
4. Do not cover any ventilation hole with newspaper, cloth, curtain, etc. in case of ventilation blocking.
5. Allow no exposed flame source on the player, e.g. burning candle.
6. The player shall be connected to AC power output socket with grounding protection.
7. If power plug and appliance coupler are used as disconnecting device, the disconnecting device shall be easily operable.
8. The waste battery must be treated according to relevant local battery wasting regulations.
9. Only applicable for safe use in the area with elevation under 2000m. See Fig. 1 for the sign.
10. Only applicable for safe use under non-tropical climate conditions. See Fig. 2 for the sign.



Fig. 1



Fig. 2

Safety Precautions




	Caution: Risk of electric shock. DO NOT OPEN.
	The sign with an exclamation mark inside an equilateral triangle warns the user that the player has important operation and maintenance instructions.

Laser Warning


1. Since the laser beam in this player can damage the eye, please do not open the enclosure. Only a qualified technician should carry out repairs.
2. This player is classified as a Class 1 laser product, and is identified as such on the label located on the rear of the enclosure.
3. The laser components of this product can generate laser radiation above the Class 1 limit.



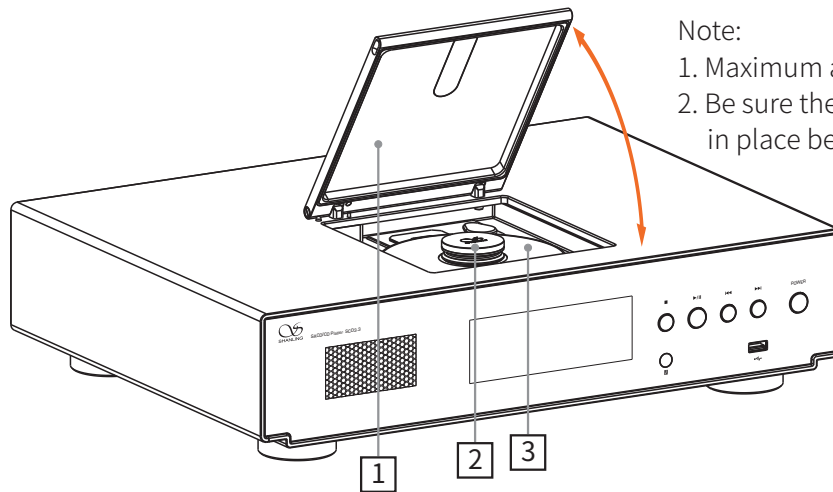 
Parts Name



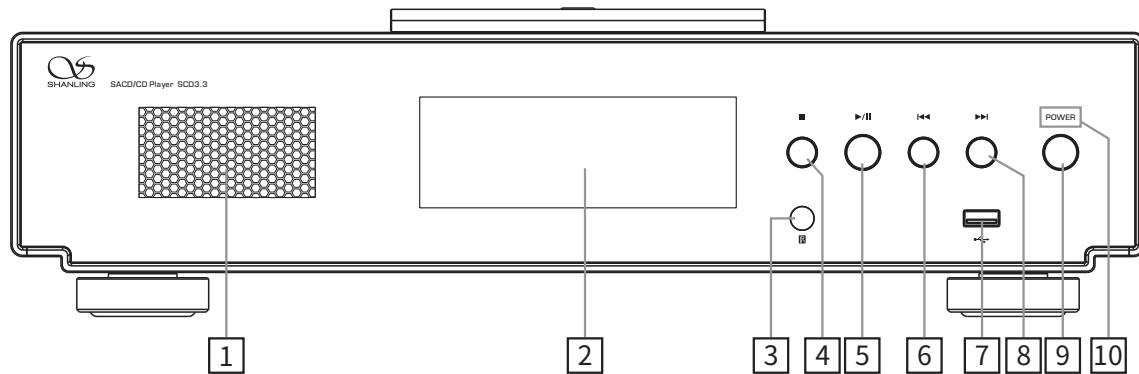1. Disc Cover
2. Disc Clamp
3. Area for Disc





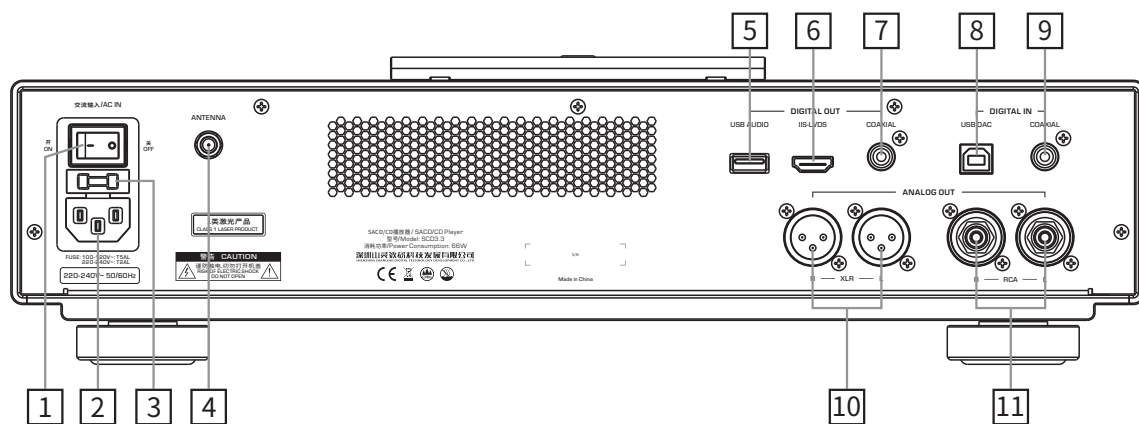1. Tubes Cover
2. Touch Screen
3. Remote Control Receiver
4. Stop Button
5. Play/Pause Button
6. Previous Track Button
7. USB Port
8. Next Track Button
9. Standby Switch/Sleep Button
10. Standby Indicator



1. Power Switch
2. Power Connector
3. Fuse
4. Bluetooth Antenna
5. USB for Digital Audio Output
6. Digital IIS-LVDS Output
7. Digital Coaxial Output
8. USB DAC Input
9. Digital Coaxial Input
10. Balanced Analog Output
11. RCA Analog Output

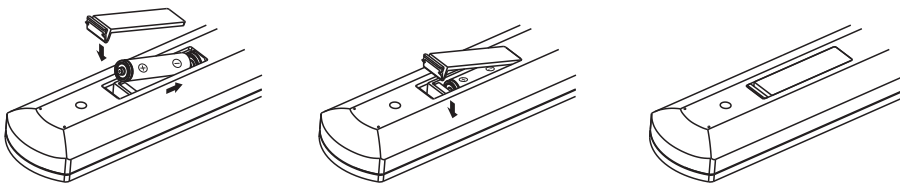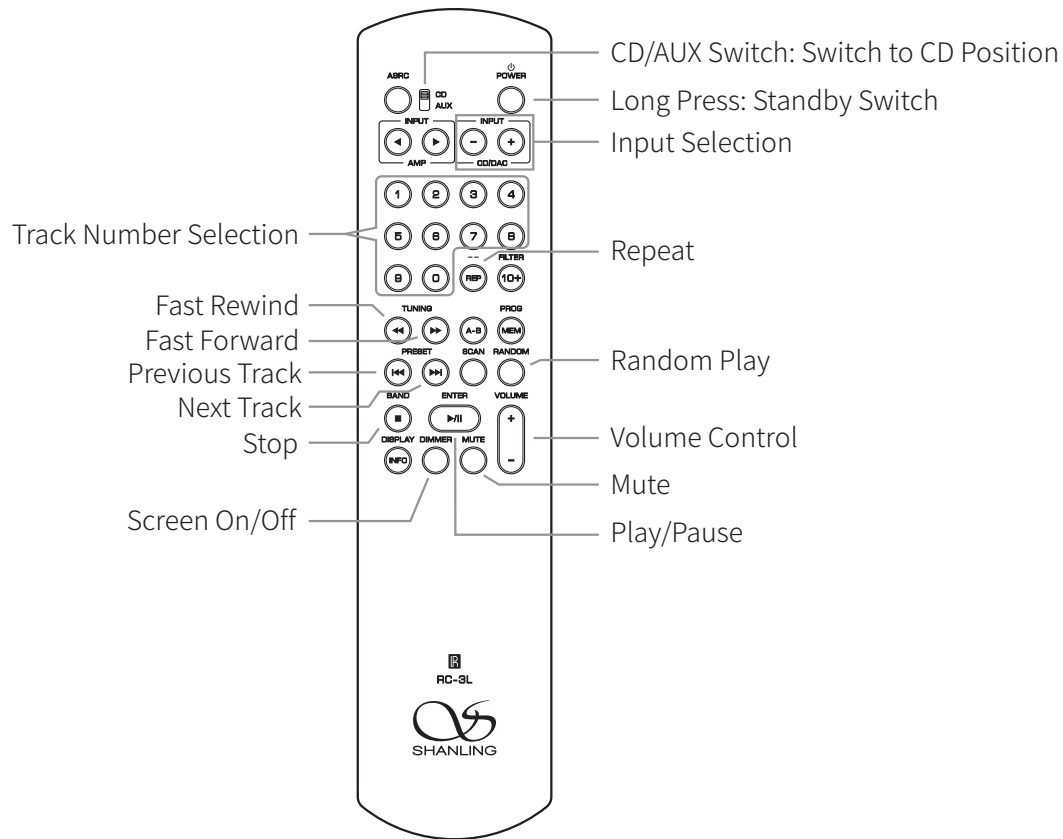Remote Control Diagram



Note:

1. The valid distance of the remote controller is not more than 10m and the included angle of remote control is not more than 30°.
2. Buttons without function names on the remote controller have no use for this product. It is normal that there will be no response when you press them.

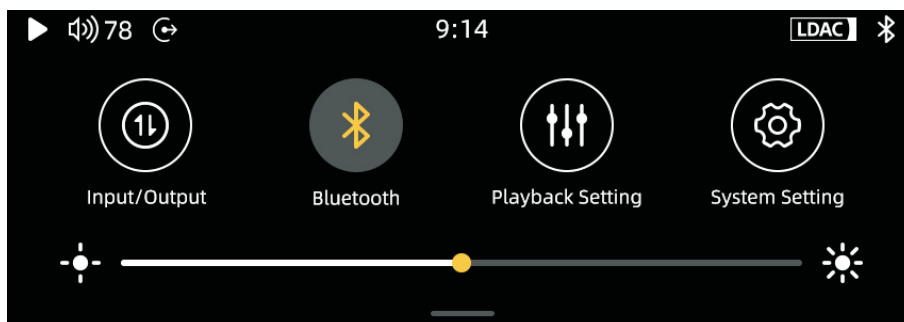
Operating instructions

Turn ON/Off

1. Connect the power cord and signal cable of the player.
2. Set the main power switch to [ON] position, standby indicator will turn red.
3. Press down the [POWER] button. Standby indicator will turn off.
4. Press down the [POWER] button for 2 seconds to turn off the machine, standby indicator will turn red.
5. Put the power button on the rear side into OFF position to completely power off the player.

Quick Access Menu

Swipe down from top of the screen to view the Quick Access Menu. Swipe up from bottom of the screen to close it.




Input/Output Switching

1. Input: Press the [- INPUT +] button on the remote control, or enter the Input/Output settings in the main menu on the device. You can switch the input between "CD Player / Local Songs / BT Input / USB DAC / COAXIAL".
2. Output: Click [⏮] icon in the swipe-down menu bar or enter the Input/Output settings in the main menu on the device, You can switch the output between "Pre-Out / Lin-Out / COAXIAL / I2S / USB".


Note: Tap on the " < " or " ⏮ " icon to exit the menu.

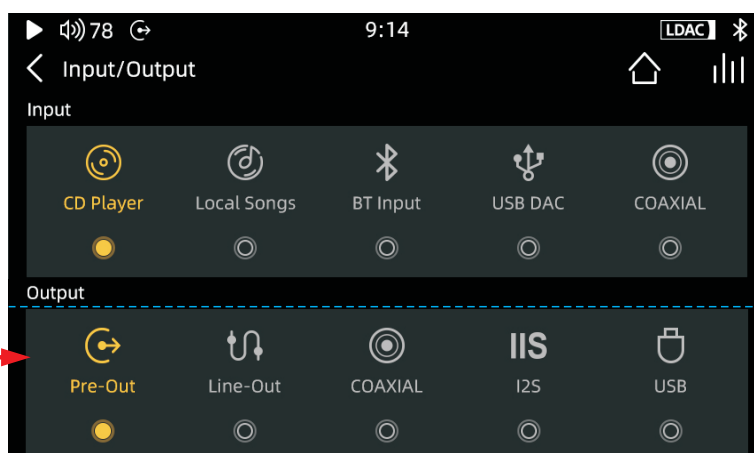Swipe up to display Output options



SACD/CD Layer Switching

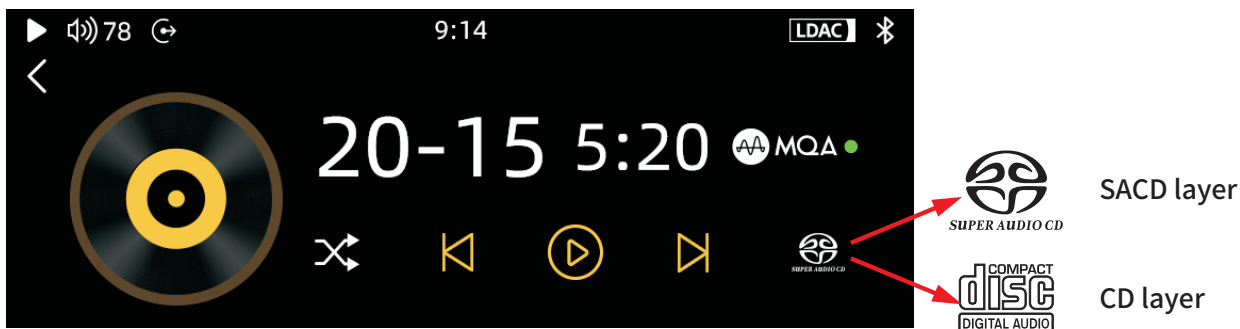Tap the "   " icon to switch between SACD and CD layers of Hybrid SACDs.



Note: USB AUDIO output is not available for SACD playback.

System Setting

Click the [] icon to view additional system setting, including: "Language / Bluetooth / SyncLink / Brightness / Lock screen Time / Lock screen / Double-tap to wake / System Update / Reset settings / About".

Volume Control

press the [VOLUME +/-] buttons on the remote control to increase or decrease the volume.

Note: Volume control is active only in pre-out mode.

Inserting Disc

1. Hold the disc cover by the sides and pull up, using the rear hinge. Please be careful, the angle is limited to 56 degrees. Insert disc and position the disc clamp on top of it.
2. Gently lower the lid back, CD will start spinning automatically and system will start reading it.

Play/Pause

1. Click the [] icon on the display or press the [▶/||] button on the panel or remote control to start playback.
2. Click the [] icon on the display or press the [▶/||] button on the panel or the remote control to pause playback. Press the button again to resume playback.

Stop

Press the [] button on the panel or on the remote control to stop the playback.

Previous Track

Click the [⏮] icon on the display or press the [⏮] button on the panel or the remote control. If the current track progressed less than 5 seconds, playback skips to the previous track. Otherwise playback will go back to the beginning of the current track, then press again to skip to the previous track.

Next Track

Click the [⏭] icon on the display or press the [⏭] button on the panel or remote control to skip to the next track.

Rewind / Fast Forward

Long press the [⏮] or [⏭] button on the panel or remote control to rewind or fast forward in the current track.

Track Selection with Numerical Button

If you want to select songs from number 1 to 9, just press the buttons on the remote control. If you want to select a song numbered 10 or more, you should press the number from the left to right. For example, if you want to select a song numbered 12, you should press 1, then press 2.

Repeat

If you want to play the current track repetitively, press [REP] button on remote control once. Display will show "🔁". If you want to play the entire disc repetitively, press [REP] button on remote control again. Display will show "🔄". To cancel repeat, press the button again. Display will show "⏮".

Random Playback

1. Press the [RANDOM] button on the remote to enable Random Playback. Device will show "🎲" icon on playback screen.
2. Press the [RANDOM] button again to cancel Random playback.

Screen On/Off

Short press the [POWER] button on the panel or the [DIMMER] button on the remote control to turn the screen On or Off.

Mute Playback

1. Press the [MUTE] button to mute playback. Display will show "MUTE 🔇".
2. Press the [MUTE] button again to resume playback.

USB Driver Playback

1. It's recommended to use USB drivers formatted to FAT32, NTFS or exFAT.
2. Drives up to 2TB are supported.
3. Support up to PCM 768kHz and DSD512.
4. Supported formats: DSD、DXD、APE、FLAC、WAV、AIFF/AIF、DTS、MP3、WMA、AAC、OGG、ALAC、MP2、M4A、AC3、OPUS、TAK、CUE

Bluetooth Input

1. Switch input to "BT Input" mode.
2. Open Bluetooth settings on your device and search for new devices.
3. Player will show up as "Shanling SCD3.3".
4. Pair it with your device and let it connect.

USB Settings

1. Connect the SCD3.3 to your computer, connect cable to the USB DAC input.
2. Click the [🔊] icon in the swipe-down menu bar or enter the Input/Output settings in the main menu on the device, and switch the Input source to "USB DAC".
3. For Windows, please download our dedicated drivers. No drivers are needed for other systems.
4. Make sure to set SCD3.3 as the active sound device on your computer.

USB drivers download:

Visit download section on our official website to download the latest USB drivers for your device:
en.shanling.com

APP Control

Download the EDDICT PLAYER app for remote control of the SCD3.3 from your phone or tablet.



Eddict Player



APP User's Manual

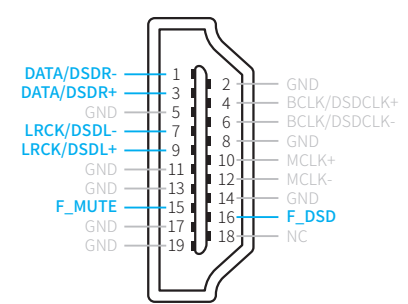
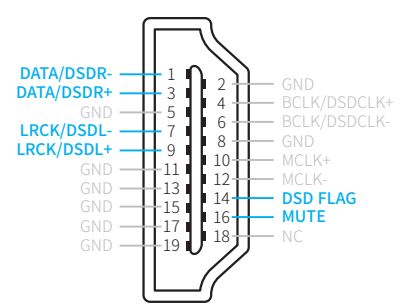
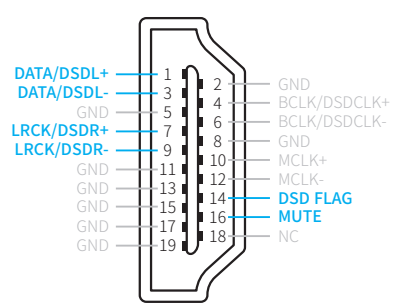
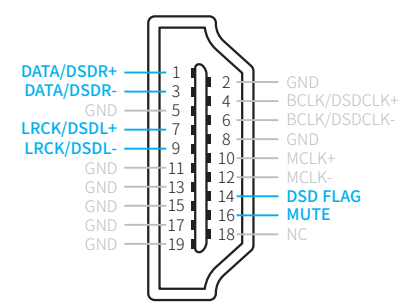
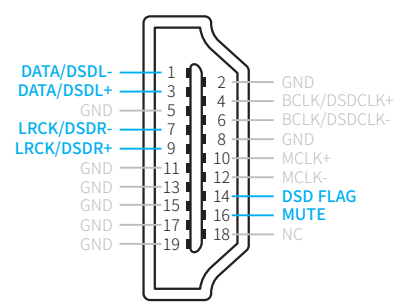
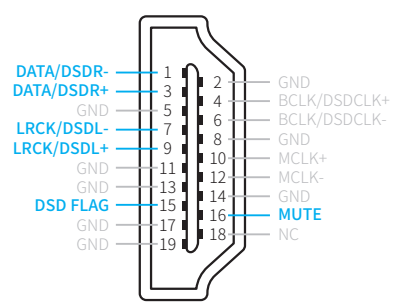
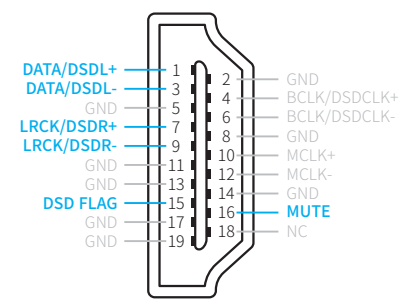
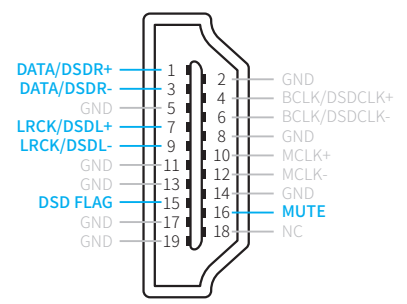
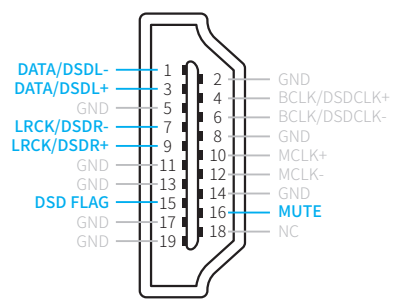
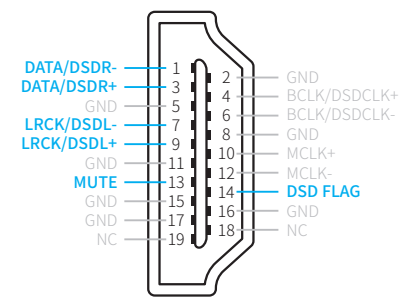
Firmware Update

Do not do operate the player during the update process.

USB Drive Update

1. Download the firmware update from Shanling official website. Copy the "update.tar" file to root/main directory of USB Drive.
2. Connect the USB Drive to the device. Go to "System Setting > System Update" and confirm to start the update process.

IIS-LVDS Output Interface

 Mode 1	 Mode 2	 Mode 3
 Mode 4	 Mode 5	 Mode 6
 Mode 7	 Mode 8	 Mode 9
 Mode 10	Note: Go to "Playback Setting > IIS Output Mode" to select.	

Attached Accessories

Quick Start Guide: 1
Warranty Card: 1
Power Cord: 1
USB Cord: 1
Antenna: 1
Remote Control: 1
Disc Clamp: 1

安全指示

- 1. 不可自行开启本机进行维修、拆卸或改造。
- 2. 为了充分通风，设备背面和两侧应最少保留10cm，顶部应最少保留20cm的空间。
- 3. 设备不应遭受水滴或水溅，机器上不应放置诸如花瓶一类的装满液体的物品。
- 4. 通风孔不要覆盖诸如报纸、桌布和窗帘等物品而妨碍通风。
- 5. 设备上不要放置裸露的火焰源，如点燃的蜡烛。
- 6. 设备应当连接到带保护接地连接的电网电源输出插座上。
- 7. 用电源插头和器具耦合器作为断开装置，断开装置应当保持能方便地操作。
- 8. 必须遵照电池废弃的相关地方条例来废弃旧电池。
- 9. 仅适用于海拔2000m以下地区安全使用，标志见图1。
- 10. 仅适用于非热带气候条件下安全使用，标志见图2。



图1



图2

★ 产品技术标准：GB4943.1-2022

安全注意事项

◎ 安全警告



警告：谨防触电，切勿打开机盖。

等边三角形中有箭头闪电符号的图形表示警告使用者在产品内有高压电，会导致人为的触电。

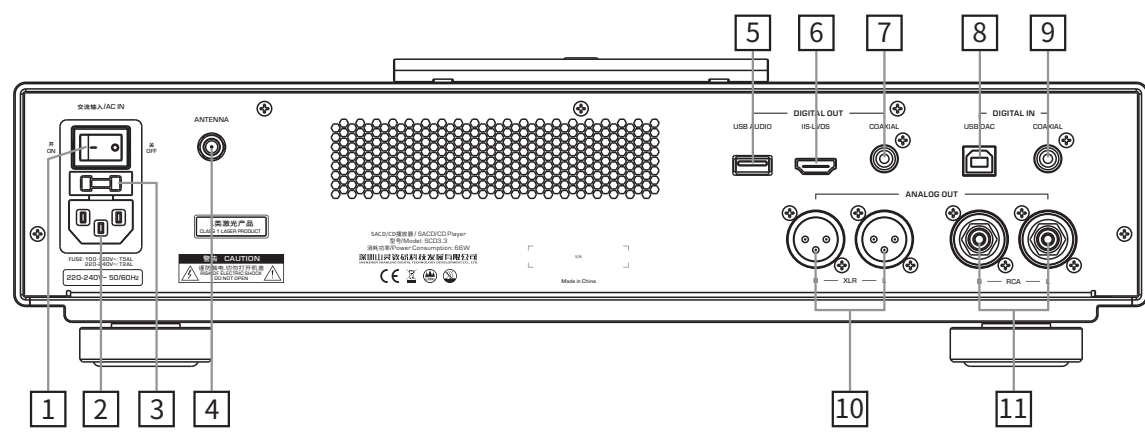
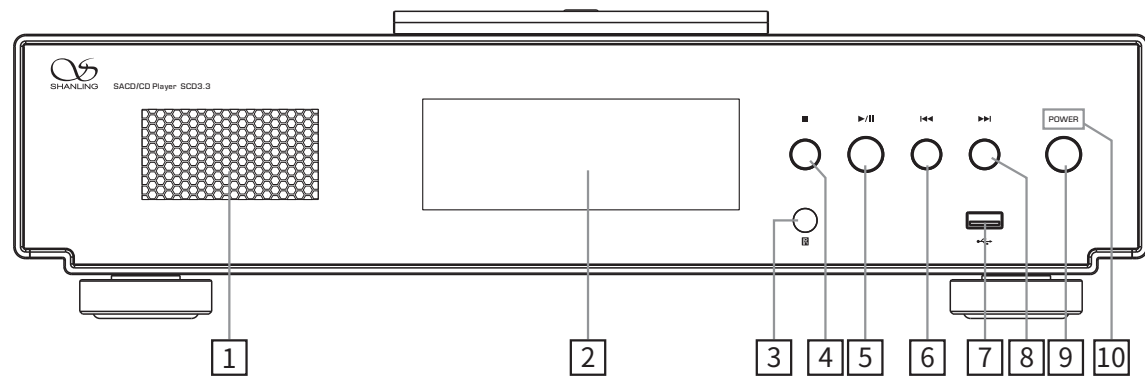
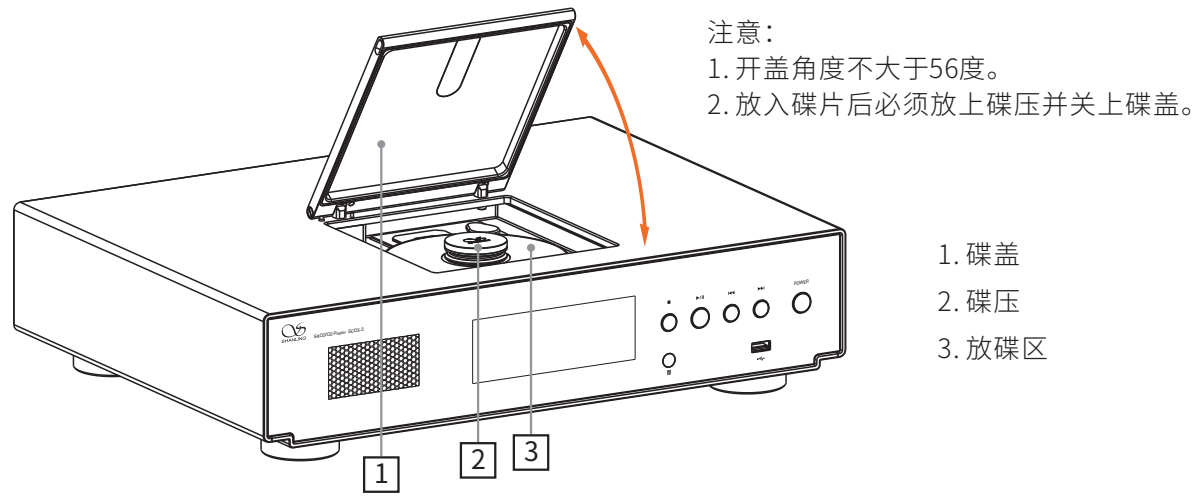
等边三角形中有叹号的图形表示警告使用者该设备有重要的操作和维护指示。

◎ 激光警告



- 1. 由于本装置中使用的镭射光束对眼睛有害，请勿打开机箱，只有专业人员方可维修。
- 2. 本装置被划分为1级镭射产品，1级镭射产品标牌位于机箱后面。
- 3. 本机的镭射元件能产生超过1级限度的镭射。



部件名称



遥控器示意图

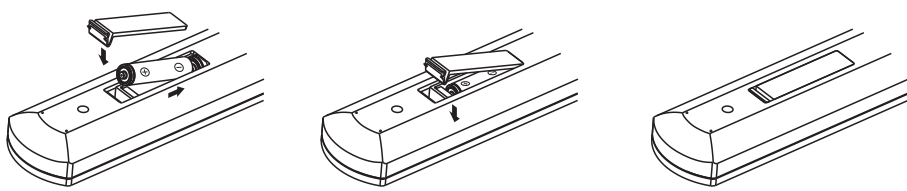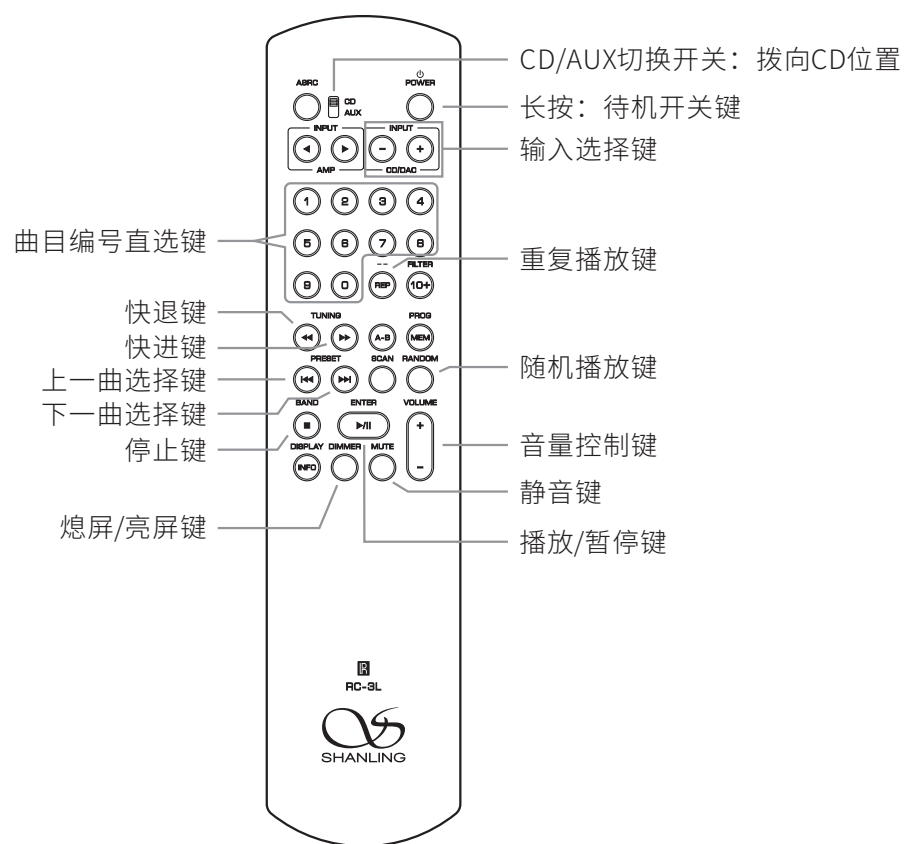

- 注：
1. 遥控器有效距离不大于10米，遥控夹角不大于30度。
 2. 遥控器未标示按键非本机功能，操作无效属正常现象。

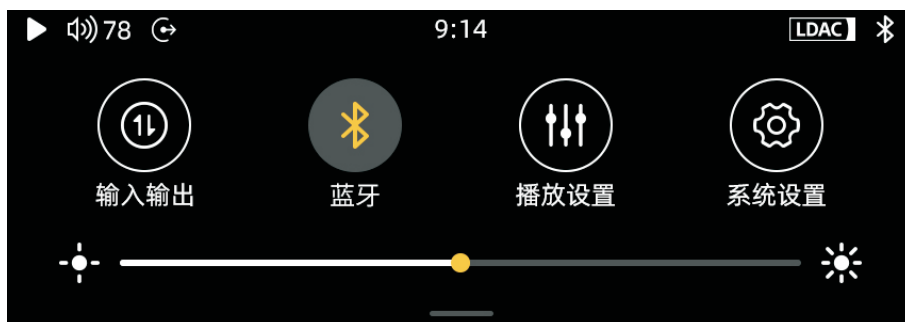
操作说明

开/关机器

1. 首先连接好机器的电源线及信号输出线。
2. 按下后板上的电源开关键至 [ON/开] 位置，此时面板上的POWER待机指示灯显示为红色。
3. 按面板上的 [POWER] 键，指示灯由红色变为熄灭，即进入开机状态。
4. 开机状态下，长按面板上的 [POWER] 键约2秒，指示灯变为红色，机器将停止工作并关闭部份电源。
5. 要关闭本机电源时，将后板电源开关置于 [OFF/关] 位置即可。若长时间不使用本机时，请将本机的交流输入电源线与市电插座分离。

下拉菜单栏

从屏幕上方向下滑动可调出快捷菜单栏，从屏幕下方向上滑动可收起菜单栏。




输入输出

输入：按下遥控器上的 [- INPUT +] 键，也可在下拉菜单栏或主界面单击 [①] 图标进入输入输出切换界面，可在 "CD播放 / 本地音乐 / 蓝牙输入 / USB DAC / COAXIAL" 之间进行输入切换。

输出：在下拉菜单栏或主界面单击 [①] 图标进入输入输出切换界面，可在 "前级 / 线路 / COAXIAL / I2S / USB" 之间进行输出切换。


注：点击 "<" 或 "⏏" 图标退出菜单。

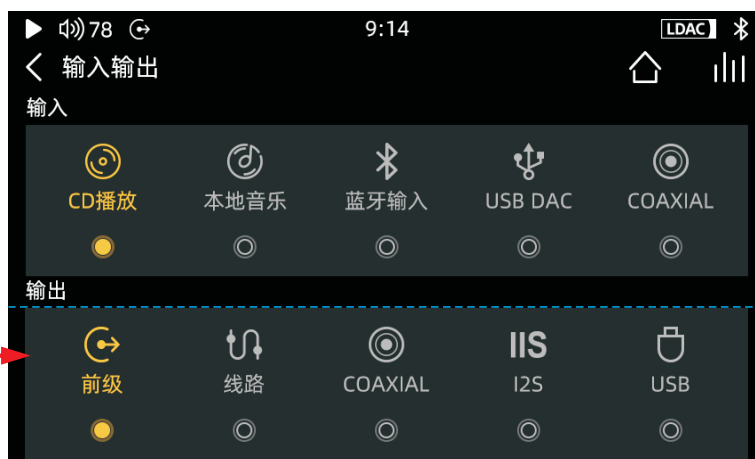向上滑动可显示输出界面



SACD/CD切换

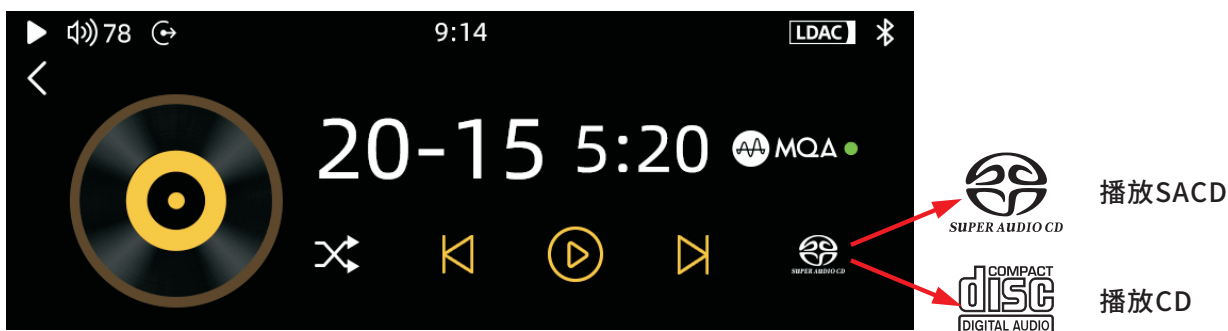当放入碟片为SACD/CD双层碟并读完曲目时，可点击触摸屏上的 "   " 图标对碟层进行切换。



注：播放SACD时不支持USB AUDIO输出。

系统设置

点击显示屏上的  图标进入系统设置界面，可以对 "语言选择 / 蓝牙 / SyncLink / 背光亮度 / 屏保时间 / 屏保 / 双击唤醒屏幕 / 系统升级 / 恢复出厂设置 / 关于" 进行查看或设置。

音量控制

按遥控器上的[VOLUME +/-] 键，可以增加或减小音量。

注：音量控制只对前级输出有效。

开/关碟盖

1. 碟盖关闭情况下，用手指扣住左右两侧凹槽处并往上拉起 (注意开盖角度不能大于约56度)，然后放入碟片并放上碟压。
2. 碟盖打开情况下，用手护住碟盖轻轻放下，碟片开始转动并读取碟片信息。

播放/暂停

1. 当放好碟片后或碟片处于停止状态时，点击显示屏上的  图标或按面板或遥控器上的 [▶/||] 键，可对当前碟片进行播放。
2. 在播放状态下，点击显示屏上的  图标或按面板或遥控器上的 [▶/||] 键，可对当前碟片进行暂停播放，再按一次该键时则恢复正常播放状态。

停止

在播放状态下，按下前面板或遥控器上的 [■] 键，可停止该碟片的播放。

上一曲

点击显示屏上的 [⏮] 图标或按面板或遥控器上的 [⏮] 键，若当前曲目播放时间少于5秒，则跳向前一个曲目。若当前曲目播放时间大于5秒，则回到当前曲目起始处播放，再按一下才跳向前一个曲目进行播放。

下一曲

点击显示屏上的 [⏭] 图标或按面板或遥控器上的 [⏭] 键，即可跳向下一个曲目进行播放。

快退/快进

长按前面板或遥控器上的 [⏮] 或 [⏭] 键时可在当前曲目中快退或快进，放开该键时恢复正常播放状态。

数字键选曲

选第1至第9首曲目，可以直接按遥控器上的1至9数字键。选10首或以上曲目先按十位数对应的数字键，再按个位数字对应数字键。如：选12首曲目，先按数字键1，再按数字键2即可。

重复播放

如果连续重复播放当前曲目，按遥控器上的 [REP] 键一次，显示屏显示 "🔁" 图标。如果连续重放整张碟片上的曲目，则再按一次 [REP] 键，显示屏显示 "🔄" 图标。若想取消重复播放功能，则再按一次 [REP] 键，显示屏显示 "🔍" 图标。

随机播放

1. 在播放状态下，按下遥控器上的 [RANDOM] 键，显示屏显示 "🎲" 图标，表示已在开始执行随机播放功能，直至全部播放完毕。
2. 按一次遥控器上的 [RANDOM] 键，即可取消随机播放。

熄屏/亮屏

短按面板上的 [POWER] 键或遥控器上的 [DIMMER] 键可打开或关闭屏幕显示。

静音

1. 按下遥控器上的 [MUTE] 键，显示屏显示 "MUTE 🔇" 图标，此时无声音输出。
2. 在静音状态下，再按下遥控器上的 [MUTE] 键一次，恢复正常放音状态。

U盘播放

1. 建议U盘使用前先格式化为FAT32、NTFS或exFAT格式，再拷入音乐文件，否则机器有可能无法识别U盘。
2. 机器后板上的USB口，支持高达2TB容量的存储设备。
3. 支持最高采样频率：768kHz和DSD512。
4. 支持文件格式：DSD、DXD、APE、FLAC、WAV、AIFF/AIF、DTS、MP3、WMA、AAC、OGG、ALAC、MP2、M4A、AC3、OPUS、TAK等，支持CUE。

Bluetooth 输入

1. 将输入源切换到 "蓝牙输入" 模式。
2. 此时本机蓝牙会一直处于可以被搜索状态，打开手机或iPad等搜索蓝牙设备。
3. 在搜索到的设备中选择 "Shanling SCD3.3"。
4. 设备连接好后，使用播放软件播放音乐即可。

USB设置

1. 将USB线从电脑连接到机器后板上的USB DAC端口。
2. 在下拉菜单栏或主界面单击 [🔌] 图标进入输入输出切换界面，将信号源切换到 "USB DAC" 模式。
3. 连接电脑后，请将"USB驱动"安装至电脑上(MAC电脑免安装驱动)。
4. 在电脑选择设置对应的声音输出设备即可。

USB驱动程序下载方式：

请登录官网www.shanling.com并进入下载中心，对应产品型号进行下载。

APP控制

扫描二维码并对应下载Eddict Player APP，安装完成后即可对产品进行操控。



Eddict Player
扫码即可下载



APP使用说明书

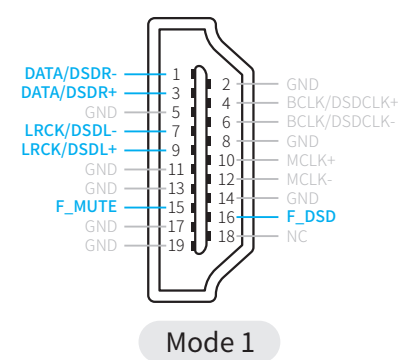
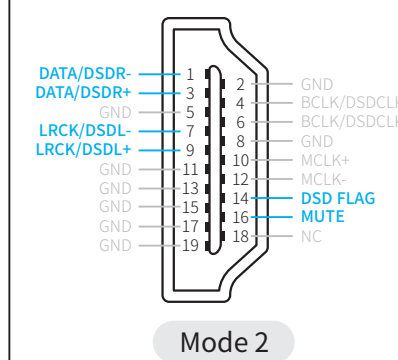
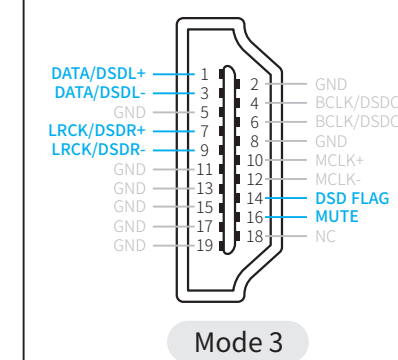
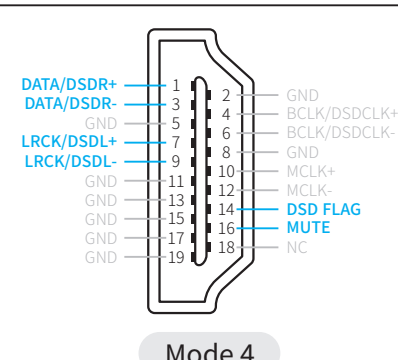
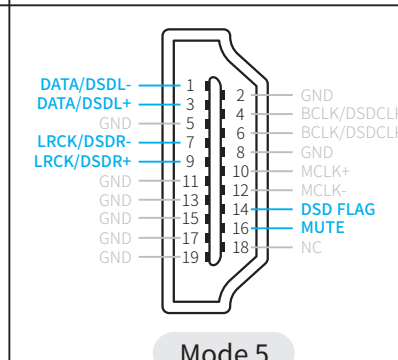
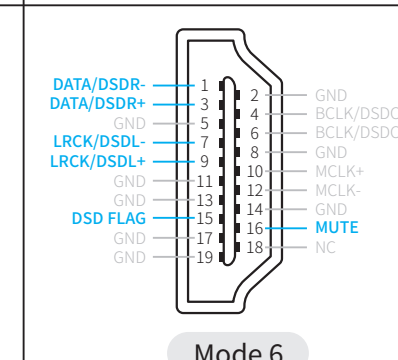
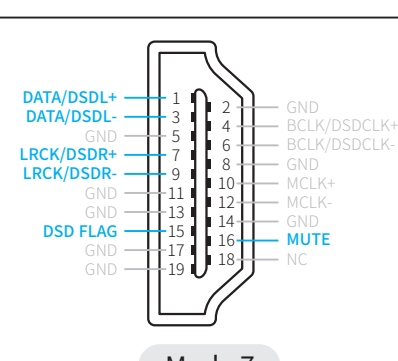
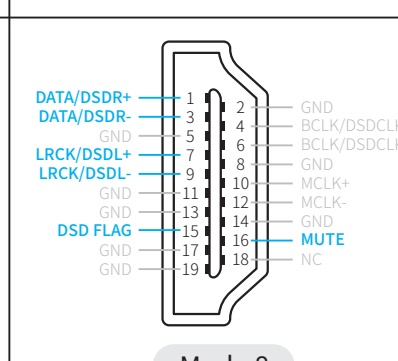
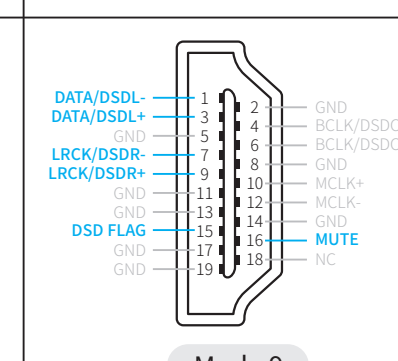
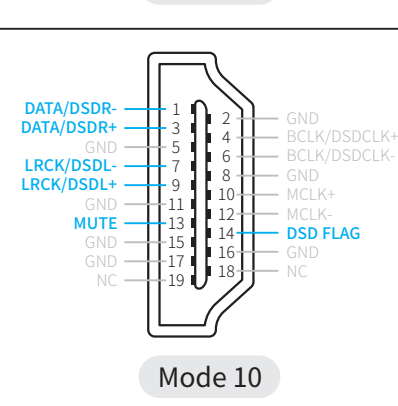
固件升级

升级过程中请不要操作机器。

U盘升级

1. 请在山灵官网 > 产品中心 > SCD3.3产品页面下载固件升级程序，将新固件 (update.tar) 拷贝到U盘根目录下。
2. 机器插上U盘，前往 "系统设置 > 系统升级" 并选择 "确定" 即可进行升级。

IIS-LVDS输出接口脚位定义

 Mode 1	 Mode 2	 Mode 3
 Mode 4	 Mode 5	 Mode 6
 Mode 7	 Mode 8	 Mode 9
 Mode 10	注：可前往 "播放设置 > IIS输出模式" 里选择需要的模式。	

随机附件

快速入门指南：1份
保修卡：1份
三联电源线：1根
USB线：1根
天线：1根
遥控器：1个
碟压：1只



微信公众号



微博公众号



Eddict Player
扫码即可下载

公司名称: 深圳山灵数码科技发展有限公司

Company: Shenzhen Shanling Digital Technology Development Co.,Ltd.

公司地址: 深圳市南山区蛇口赤湾一路10号

Address: No.10, Chiwan 1 Road, Shekou Nanshan District of Shenzhen City, China.

QQ群/QQ Group: 667914815; 303983891; 554058348

服务热线/Telephone: 400-630-6778

电子邮件/E-mail: info@shanling.com

官网/Official Website: www.shanling.com

工作时间(周一至周五): 08:00-12:00; 13:30-17:30

由于产品不断改进, 各项规格及设计随时更改, 恕不另行通知。

Due to continuous improvement, every specification and design is subject to change at any time without further notice.