


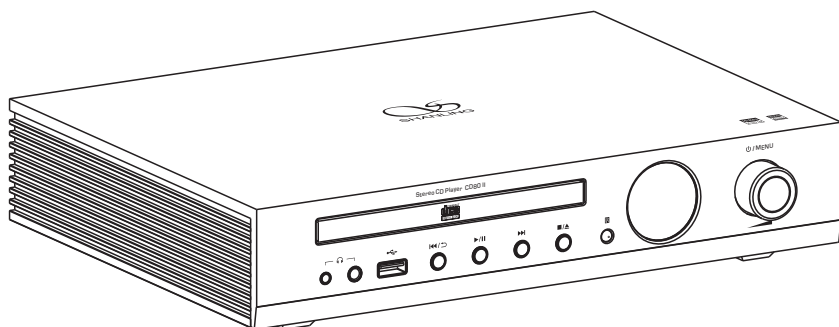

C080 II

Quick Start Guide

快速入门指南



Safety Instructions

- 1. Don't repair, disassemble or modify the device without permission.
- 2. For good ventilation, a minimum of 10cm clearance shall be maintained at the back and both sides and 20cm at the top of the player.
- 3. Allow no water dripping or splashing into the player. Place no object containing liquid on the player, e.g. Vase.
- 4. Do not cover any ventilation hole with newspaper, cloth, curtain, etc. in case of ventilation blocking.
- 5. Allow no exposed flame source on the player, e.g. burning candle.
- 6. The player shall be connected to AC power output socket with grounding protection.
- 7. If power plug and appliance coupler are used as disconnecting device, the disconnecting device shall be easily operable.
- 8. The waste battery must be treated according to relevant local battery wasting regulations.
- 9. Only applicable for safe use in the area with elevation under 2000m. See Fig. 1 for the sign. 
- 10. Only applicable for safe use under non-tropical climate conditions. See Fig. 2 for the sign.  Fig. 1 Fig. 2

Safety Precautions





Caution: Risk of electric shock. DO NOT OPEN.

The sign with arrowed lightning inside an equilateral triangle warns the user that the player has high voltages inside which can cause electric shock.




The sign with an exclamation mark inside an equilateral triangle warns the user that the player has important operation and maintenance instructions.

Laser Warning


- 1. Since the laser beam in this player can damage the eye, please do not open the enclosure. Only a qualified technician should carry out repairs.
- 2. This player is classified as a Class 1 laser product, and is identified as such on the label located on the rear of the enclosure.
- 3. The laser components of this product can generate laser radiation above the Class 1 limit.



Parts Name

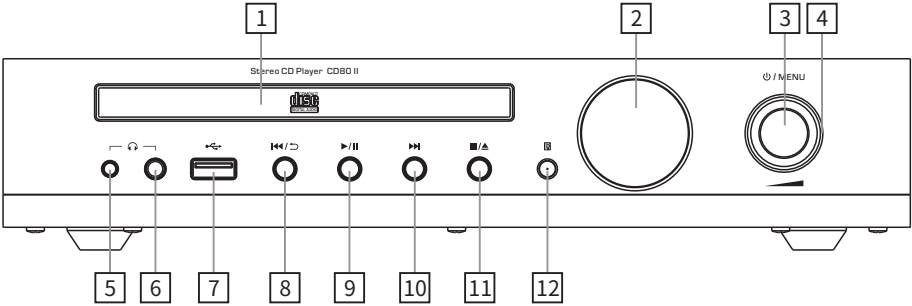


1. CD Drive
2. Multifunction Display
3. Power Button / Menu Setting / Volume Wheel
4. Standby Indicator
5. 3.5mm Single-Ended Headphone Output
6. 4.4mm Balanced Headphone Output
7. USB Port
8. Previous Track / Return Button
9. Play/Pause Button
10. Next Track Button
11. Stop & Eject Button
12. Remote Control Receiver

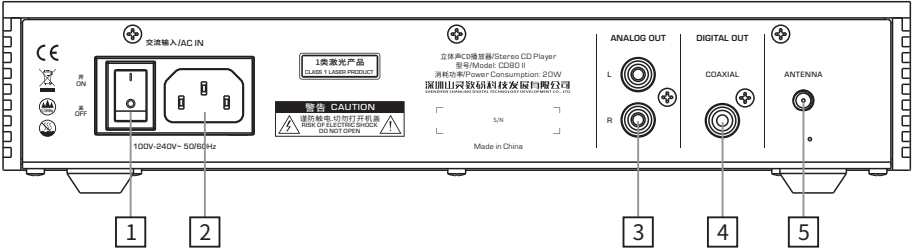

1. Power Switch
2. Power Connector
3. Analog Output
4. Digital Coaxial Output
5. Bluetooth Antenna

Remote Control Diagram

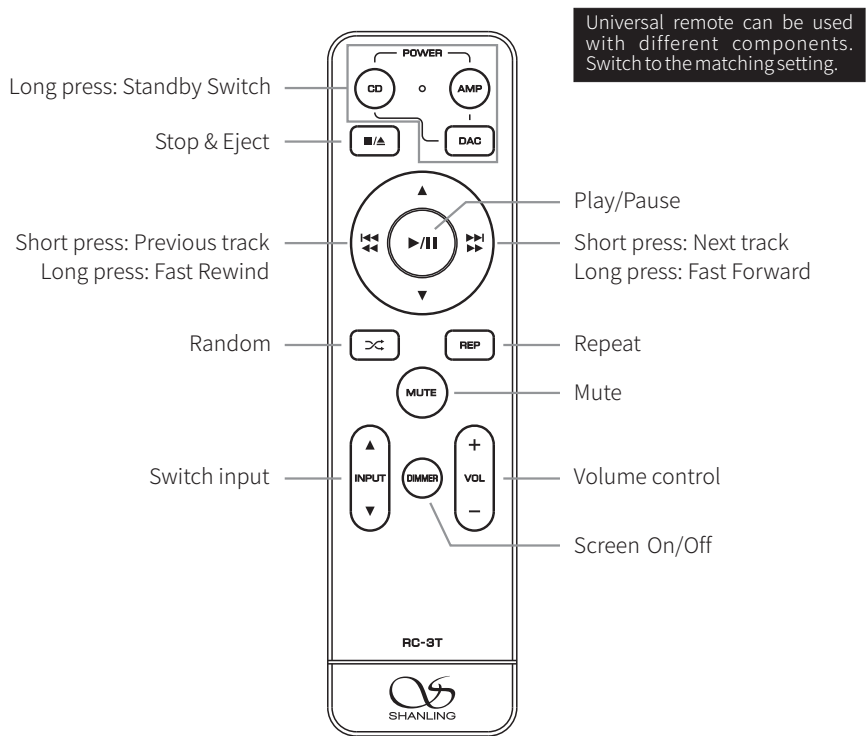

- Note:
1. Use remote within 10m distance and less than 30 degree angle.
 2. Some buttons on universal remote server no functions with CD80 II.

Operating instructions

Turn ON/OFF

1. Connect the power cord and signal cable of the machine.
2. Set the rear button to [ON] position, wait for the indicator to turn red.
3. Press down the [⏻/MENU] wheel. Indicator will turn blue and device power On.
4. Long press the [⏻/MENU] wheel for 2 seconds to turn off the device, indicator will turn red.
5. Put the power button on the rear side into OFF position to completely power off the machine.

Menu Setting

Press in on the [⏻ / MENU] wheel to enter the Setup menu.

Rotate the knob to move through menu.

Press the knob to confirm.

Press the [⏮/⏭] button to return to previous menu.

Select Input Source

Press the [⏻/MENU] button to enter Input menu or press the [▲ INPUT ▼] buttons on remote to cycle between inputs.

Available modes "CD / USB / BT".

Volume Control

Turn the wheel on the machine or press the [VOL +/-] buttons on the remote control to increase or decrease the volume.

Note: In Line-Out mode, volume is fixed.

Inserting and Removing Disc

1. Press the [■/▲] button on player or remote to open the CD drive. Press the button again to close the CD drive.
2. Press the [■/▲] button to stop playback. Press the button again to open the CD driver.

Pause Playback

Press the [▶/II] button on player or remote to pause playback. Press the button again to resume playback. "II" Icon will be displayed while playback is paused.

Previous Track

Press the [◀◀] button on player or remote. If the current track played for less than 5 seconds, it will switch to previous track. If the current track played for more than 5 seconds, it will jump to the beginning of the current track. Press the button again to switch to previous track.

Next Track

Press the [▶▶] button on player or remote to switch to the next track.

Fast Rewind / Fast Forward

Long press the [◀◀/◀◀] or [▶▶/▶▶] button to fast rewind or fast forward in the current track.

Repeat

If you want to play the current track repetitively, press [REP] button on remote control once. Display will show "🔁".

If you want to play the entire disc repetitively, press [REP] button on remote control again. Display will show "🕒".

To cancel repeat, press the button again. Display will show "🔍".

Random Playback

1. Press the [🔍] button. Display will show "🔍".
2. Press the [🔍] button to end random playback.

Screen On/Off

Press the [DIMMER] button on the remote to turn display On/Off.

Mute Playback

1. Press the [MUTE] button to mute playback. Display will show "MUTE".
2. Press the [MUTE] button again to resume playback.

USB Driver Playback

1. Switch the source / input to USB mode.
2. It's recommended to use USB drivers formatted to FAT32.
3. Drives up to 2TB are supported.

4. Support up to PCM 768kHz and DSD512.

5. Supported formats: DSD、DXD、APE、FLAC、WAV、AIFF/AIF、DTS、MP3、WMA、AAC、OGG、ALAC、MP2、M4A、AC3、OPUS、TAK、CUE

Bluetooth Input

1. Switch the source / input to BT mode.
2. Open Bluetooth settings on your device and search for new devices.
3. Player will show up as "Shanling CD80 II".
4. Pair it with your device and let it connect.

Setup

Press the [⏻ / MENU] button to enter settings. Available settings are "Input Options / Output Options / Gain / Bluetooth Setting / SyncLink / Playback Setting / System Setting".

• Input Options

Switch between "CD", "USB" or "BT" modes.

• Output Options

Switch between "Pre-Out", "Line-Out" or "HP-Out" modes.

• Gain

Switch between High and Low gain.

• Bluetooth Setting

Turn on Bluetooth, set Bluetooth Codec and manage paired devices.

• SyncLink

Enable SyncLink feature for remote control from smartphone.

• Playback Setting

Set "Default Vol / USB Gapless / USB Replay Gain / USB Resume Mode / Digital Filters / Channel Balance / Play Mode / CD Play Time / Folder Skip".

• System Setting

Available options "Language / Brightness / Reset Settings / System Update / About".

Firmware Update

Do not do operate the player during the update process.

1. Download the firmware update from Shanling official website. Copy the "update.bin" file to root/main directory of USB Drive.
2. Connect the USB Drive to the device. Go to "Setup > System Setting > System Update" and confirm to start the update process.

USB Playback with APP Control

1. Go to Settings menu.
2. Enable "Bluetooth" connection.
3. Enable "SyncLink" Connection.
4. Insert USB drive and switch to "USB" input option by [ / MENU] button or by [ INPUT ] buttons on remote.
5. On your phone, open Eddict player app, go to SyncLink function and turn on Client mode. Select "Shanling CD80 II" from list of available devices.
6. Click on "Scan Music" to scan for music files on the USB Drive.
7. Now you can control music playback on your CD80 II.

Scan code to download the
Eddict Player app



Eddict Player



APP User's Manual

Accessories

Quick Start Guide: 1

Warranty Card: 1

Power Cord: 1

Bluetooth Antenna: 1

Remote Control: 1

安全指示

- 1. 不可自行开启本机进行维修、拆卸或改造。
- 2. 为了充分通风，设备背面和两侧应最少保留10cm，顶部应最少保留20cm的空间。
- 3. 设备不应遭受水滴或水溅，机器上不应放置诸如花瓶一类的装满液体的物品。
- 4. 通风孔不要覆盖诸如报纸、桌布和窗帘等物品而妨碍通风。
- 5. 设备上不要放置裸露的火焰源，如点燃的蜡烛。
- 6. 设备应当连接到带保护接地连接的电网电源输出插座上。
- 7. 用电源插头和器具耦合器作为断开装置，断开装置应当保持能方便地操作。
- 8. 必须遵照电池废弃的相关地方条例来废弃旧电池。
- 9. 仅适用于海拔2000m以下地区安全使用，标志见图1。
- 10. 仅适用于非热带气候条件下安全使用，标志见图2。



图1



图2

★ 产品技术标准：GB4943.1-2022

安全注意事项

◎ 安全警告





警告：谨防触电，切勿打开机盖。



等边三角形中有箭头闪电符号的图形表示警告使用者在产品内有高压电，会导致人为的触电。




等边三角形中有叹号的图形表示警告使用者该设备有重要的操作和维护指示。

◎ 激光警告


- 1. 由于本装置中使用的镭射光束对眼睛有害，请勿打开机箱，只有专业人员方可维修。
- 2. 本装置被划分为1级镭射产品，1级镭射产品标牌位于机箱后面。
- 3. 本机的镭射元件能产生超过1级限度的镭射。



部件名称

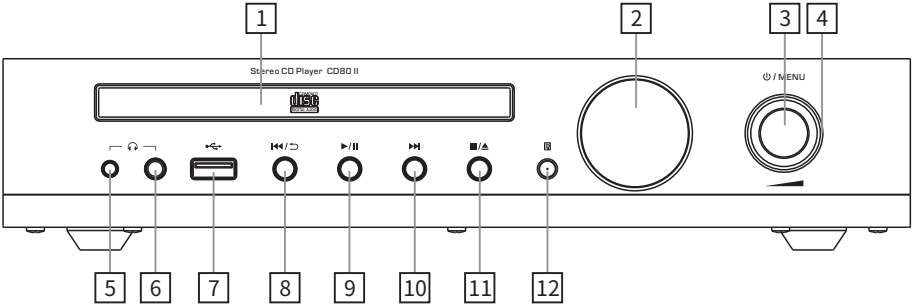


- | | |
|-------------------|--------------|
| 1. 碟仓区 | 8. 上一曲选择/返回键 |
| 2. 多功能显示窗 | 9. 播放/暂停键 |
| 3. 电源按钮/菜单设置/音量调节 | 10. 下一曲选择键 |
| 4. 待机指示灯 | 11. 停止/进出仓键 |
| 5. 3.5mm单端耳机输出 | 12. 遥控接收窗 |
| 6. 4.4mm平衡耳机输出 | |
| 7. U盘插口 | |

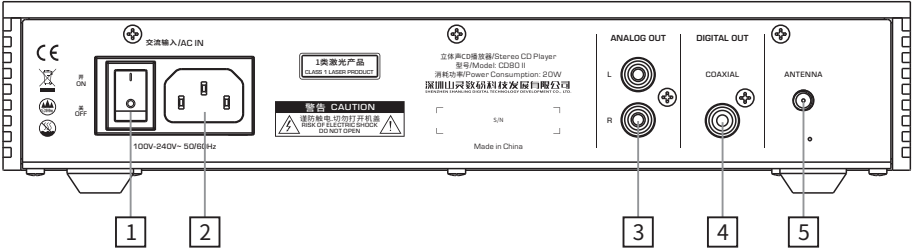

- | | |
|-------------|-------------|
| 1. 总电源开关 | 4. 数字同轴输出接口 |
| 2. 交流电源输入插座 | 5. 蓝牙天线 |
| 3. 模拟音频输出接口 | |

遥控器示意图

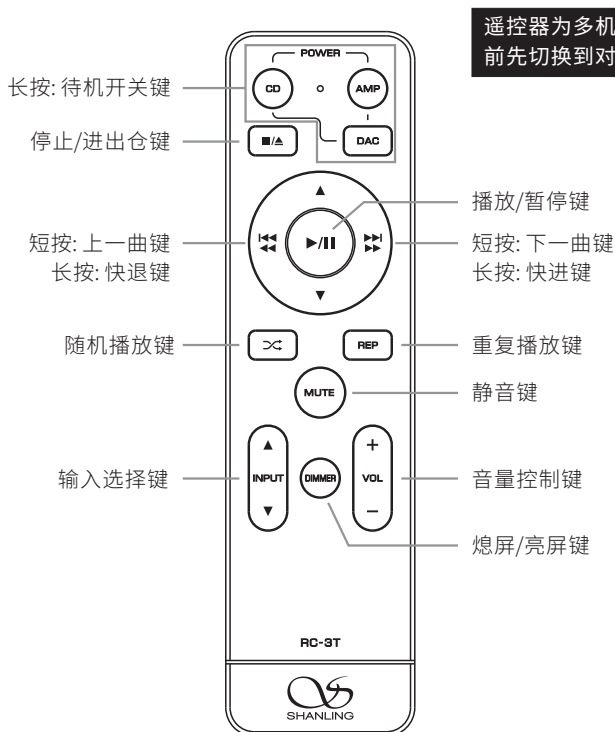

遥控器为多机型通用，使用前
先切换到对应的机型键。

注：

1. 遥控器有效距离不大于10米，遥控夹角不大于30度。
2. 遥控器未标示按键非本机功能，操作无效属正常现象。

操作说明

开/关机器

1. 首先连接好机器的电源线及信号线。
2. 按下后板上的电源开关键至 [ON/开] 位置，此时待机指示灯先点亮为紫色，然后再变为红色。
3. 按下面板上的 [⏻/MENU] 旋钮，指示灯由红色变为蓝色，即进入开机状态。
4. 开机状态下，长按面板上的 [⏻/MENU] 键2秒，指示灯变为红色，机器将停止播放并关闭部份电源。
5. 要关闭本机电源时，将后板电源开关置于 [OFF/关] 位置即可。若长时间不使用本机时，请将本机的交流输入电源线与市电插座分离。

菜单设置

在主界面按下机器上 [⏻/MENU] 旋钮即可进入 "设置" 菜单界面。

旋转：可进行上下选择。

按下：确认选择。

返回：按机器上的 [⏮/⏭] 键可返回上一级菜单。

输入选择

按下机器上的 [⏻/MENU] 旋钮，进入 "输入选择" 或按遥控器上的 [▲INPUT▼] 键，音频信号可在 "CD / U盘 / 蓝牙" 模式循环切换。

音量控制

旋转机器上的旋钮或按遥控器上的 [VOL +/-] 键，可以增加或减小音量。

注：线路输出音量不可调。

停止/进出仓

1. 在开机状态下，按下前面板或遥控器上的 [■/▲] 键，可打开碟仓托盘，将碟片放上后再按一次该键即可关闭碟仓托盘。
2. 在播放状态下，按下前面板或遥控器上的 [■/▲] 键，先停止当前碟片的播放，再按一次该键即可打开碟仓托盘。

暂停播放

在播放过程中，若想要中断播放而短时间进入暂停状态，则按下前面板或遥控器上的 [▶/||] 键，此时显示屏上显示 "||" 图标，若再按一次该键则恢复正常播放状态。

上一曲

在正常播放时，按下前面板或遥控器上的 [⏮] 键，若当前曲目播放时间少于5秒，则跳向前一个曲目。若当前曲目播放时间大于5秒，则回到当前曲目起始处播放，再按一下才跳向前一个曲目，此时中断原曲目的播放而进入到上一个曲目的播放。

下一曲

在正常播放时，若想跳过当前曲目，只需按下前面板或遥控器上的 [⏭] 键即能跳到下一个曲目，此时中断原曲目的播放而进入到下一个曲目的播放。

快退/快进

长按前面板或遥控器上的 [⏮/⏮] 或 [⏭/⏭] 键时可在当前曲目中快退或快进，放开该键时恢复正常播放状态。

重复播放

如果连续重复播放当前曲目，按遥控器上的 [REP] 键一次，显示屏显示 "🔄" 图标。如果连续重放整张碟片上的曲目，则再按一次 [REP] 键，显示屏显示 "🔄" 图标。若想取消重复播放功能，则再按一次 [REP] 键，显示屏显示 "☰" 图标。

随机播放

1. 在播放状态下，按下遥控器上的随机播放键 [🎲]，显示屏上显示 "🎲" 图标。碟机随机播放碟片曲目直至全部播放完毕。
2. 按一次 [🎲] 键，即可取消随机播放。

熄屏/亮屏

按下遥控器上的 [DIMMER] 键可打开或关闭屏幕显示。

静音

1. 在放音状态下按下遥控器上的 [MUTE] 键，显示屏显示 "MUTE" 字符，此时无声音输出。
2. 在静音状态下，再按下遥控器上的 [MUTE] 键一次，恢复正常放音状态。

U盘播放

1. 将信号源切换到 "U盘" 模式。
2. 建议U盘使用前先格式化为FAT32格式，再拷入音乐文件，否则机器有可能无法识别U盘。
3. 机器面板上的USB口，支持高达2TB容量的存储设备。
4. 支持最高采样频率：384kHz和DSD256。
5. 支持文件格式：DSD、DXD、APE、FLAC、WAV、AIFF/AIF、DTS、MP3、WMA、AAC、OGG、ALAC、MP2、M4A、AC3、OPUS、TAK等，支持CUE。

Bluetooth 输入

1. 将信号源切换到 "蓝牙" 模式。
2. 此时本机蓝牙会一直处于可以被搜索状态，打开手机或iPad等搜索蓝牙设备。
3. 在搜索到的设备中选择 "Shanling CD80 II"。
4. 设备连接好后，使用播放软件播放音乐即可。

设置

在主界面按下机器上 [⏻ / MENU] 旋钮即可进入 "设置" 菜单界面，可对 "输入选择 / 输出选择 / 增益 / 蓝牙配置 / SyncLink / 播放设置 / 系统设置" 进行设置。

• 输入选择

可选择 "CD"、"U盘" 或 "蓝牙" 模式。

• 输出选择

可选择 "前级"、"线路" 或 "耳机" 模式。

• 增益

可选择 "High" 高增益 或 "Low" 低增益。

• 蓝牙配置

可设置 "蓝牙" 打开或关闭、"无线播放品质" 及 "蓝牙搜索"。

• SyncLink

可打开或关闭SyncLink功能。

• 播放设置

可对 "开机音量 / USB无缝播放 / USB回放增益 / USB记忆播放 / 数字滤波器 / 声道平衡 / 播放模式 / CD播放时间 / 文件夹跳曲" 进行设置。

• 系统设置

可对 "语言选择 / 背光亮度 / 恢复出厂设置 / 系统升级 / 关于" 进行设置。

固件升级

升级过程中请不要操作机器。

1. 请在山灵官网 - 产品中心 - CD80 II产品页面下载固件升级程序，将新固件 (update.bin) 拷贝到U盘根目录下。
2. 机器插上U盘，前往 "设置 > 系统设置 > 系统升级" 并选择 "确定" 即可进行升级。

APP控制

1. 按下机器上的 [⏻/MENU] 旋钮进入 "设置" 界面。
2. 进入 "蓝牙配置 - 蓝牙" 选项并将开关打开，按机器上的 [⏮/⏭] 键可返回上一级菜单。
3. 选择 "SyncLink" 选项并将开关打开，按机器上的 [⏮/⏭] 键可返回到主界面。
4. 将U盘插于面板的U盘插口上，按下机器上的 [⏻/MENU] 旋钮并进入 "输入选择" 项或遥控器上的 [▲/INPUT ▼] 键将音频信号切换到 "U盘" 模式。

扫描二维码并对应下载Eddict Player APP，安装完成后即可对产品进行操控。



Eddict Player
扫码即可下载



APP使用说明书

5. 手机打开 "Eddict Player" APP，点击左上角的 "≡" 图标，选择 "SyncLink - 客户端" 并将开关打开，在搜索到的设备中选择 "Shanling CD80 II" 后返回上一级菜单。
6. 选择 "扫描音乐" 选项并点击扫描，扫描完成后U盘上的曲目即可在手机上进行播放。
7. 返回到 "Eddict Player" APP主界面，选择 "本地音乐" 即可在手机上进行播放操控。

随机附件

快速入门指南：1份

保修卡：1份

三联电源线：1根

蓝牙天线：1根

遥控器：1个



微信公众号



微博公众号



Eddict Player
扫码即可下载

公司名称: 深圳山灵数码科技发展有限公司

Company: Shenzhen Shanling Digital Technology Development Co.,Ltd.

公司地址: 深圳市南山区蛇口赤湾一路10号

Address: No.10, Chiwan 1 Road, Shekou Nanshan District of Shenzhen City, China.

QQ群/QQ Group: 667914815; 303983891; 554058348

服务热线/Telephone: 400-630-6778

电子邮件/E-mail: info@shanling.com

官网/Official Website: www.shanling.com

工作时间(周一至周五): 08:00-12:00; 13:30-17:30

由于产品不断改进,各项规格及设计随时更改,恕不另行通知。

Due to continuous improvement, every specification and design is subject to change at any time without further notice.